

AT コマンド仕様書 (AT Commands Manual)

LTE Cat-M1 Module
WSCLxADAH2Z

SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE.

TAIYO YUDEN CO., LTD provides customers with comprehensive technical support and service. Please contact from our website by mail.

TAIYO YUDEN CO., LTD

Website: <http://www.yuden.co.jp/>

Copyright © TAIYO YUDEN CO., LTD. 2023. All rights reserved.

TAIYO YUDEN Co., Ltd. (hereinafter "TAIYO YUDEN"), lawfully has patent rights, copyrights and other rights, powers and authority (including license) to the firmware embedded to the memory of the Products (the "Embedded Firmware"). Customer is not permitted to use the Embedded Firmware for other products except the Products, to disclose or offer the Embedded Firmware, either wholly or partly, to any third party (including uploading to customer's or third party (ies)'s web sites and downloading by third parties from such sites), nor to copy, revise, upgrade, make specification change, alienate the Embedded Firmware and so on (including reverse engineering).

TAIYO YUDEN reserves the right to make changes to any products described herein and reserves the right to revise this document and to make changes from time to time in content hereof with no obligation to notify any person of revisions or changes.

Information contained in this document is intended to convey examples of typical performances and/or applications of our products and is not intended to make any warranty with respect to the intellectual property rights or any other related rights of TAIYO YUDEN or any third parties nor grant any license under such rights.

Trademarks and Permissions

TAIYO YUDEN is trademark of TAIYO YUDEN CO., LTD. Other trademarks, product, service and company names mentioned are the property of their respective owners.

Notice

Please conduct validation and verification of our products in actual condition of mounting and operating environment before using our products.

Because this Product is not designed for radiation durability, please refrain from using this Product exposed to radiation.

Communication by wireless between this Product and other devices might not be established nor maintained depending upon radio environment, or operating condition of this Product or other devices.

This Product is operated in the licensed band at 2GHz/900MHz. In case this Product is used around the other wireless devices which are operated in the same frequency band as this Product, there is a possibility that radio interference occurs between this Product and such other devices. If such radio interference occurs, please use in environment which such radio interference doesn't occur as stopping the operation of the other devices or relocating this Product etc.

The products listed in this specification are intended for use in general electronic equipment (e.g., AV equipment, OA equipment, home electric appliances, office equipment, information and communication equipment including, without limitation, mobile phone, and PC).

Please be sure to contact TAIYO YUDEN for further information before using the products for any equipment which may directly cause loss of human life or bodily injury (e.g., transportation equipment including, without limitation, automotive powertrain control system, train control system, and ship control system, traffic signal equipment, disaster prevention equipment, medical equipment classified as Class I, II or III by IMDRF, highly public information network equipment including, without limitation, telephone exchange, and base station).

Please do not incorporate our products into any equipment requiring high levels of safety and/or reliability (e.g., aerospace equipment, aviation equipment, medical equipment classified as Class IV by IMDRF, nuclear control equipment, undersea equipment, military equipment).

When our products are used even for high safety and/or reliability-required devices or circuits of general electronic equipment, it is strongly recommended to perform a thorough safety evaluation prior to use of our products and to install a protection circuit as necessary.

Please note that unless you obtain prior written consent of TAIYO YUDEN, TAIYO YUDEN shall not be in any way responsible for any damages incurred by you or third parties arising from use of the products listed in this specification for any equipment requiring inquiry to TAIYO YUDEN or prohibited for use by TAIYO YUDEN as described above.

Limitation of Warranty

TAIYO YUDEN warrants only if the Product is operated under the warranty condition set forth in this Datasheet ("the Warranty Condition"). Please note that TAIYO YUDEN shall not be liable for any defect and/or malfunction arising from use of the Product under the terms and conditions other than the Warranty Condition hereof. In addition, when this Product is used under environmental conditions such as over voltage which is not conformed to the Warranty Condition, this Product may be destroyed in short mode. To ensure the security of customer's product, please add an extra fuse or/and a protection circuit for over voltage etc.

In some cases, TAIYO YUDEN may use replacements as component parts of the Product.

Such replacements shall apply only to component parts of the Products, which TAIYO YUDEN deems it possible to replace or completely substitute according to (i) scope of warranty provided in this Specification (electric characteristics, outline, dimension, conditions of use, reliability tests, official standard (the Radio Law etc.), and so on) and (ii) quality of the Products. TAIYO YUDEN also ensures traceability of such replacements based on each production lot.

Import and Export Regulations

Some of our products listed in this specification may require specific procedures for export according to "U.S. Export Administration Regulations", "Foreign Exchange and Foreign Trade Control Law" of Japan, and other applicable regulations. Should you have any questions on this matter, please contact our sales staff.

●Revision History

Version	Date	Summary of change
1.0	2023.09.29	-

● Contents

1. AT commands list.....	- 8 -
1.1. Applicable products	- 8 -
1.2. Important notice.....	- 8 -
1.3. 3GPP supported AT commands list.....	- 8 -
1.4. Altair proprietary supported AT commands list	- 10 -
2. GPP supported AT commands description	- 11 -
2.1. Request manufacturer identification +GMI	- 11 -
2.2. Request model identification +GMM	- 12 -
2.3. Request revision identification +GMR	- 13 -
2.4. Request product serial number identification +CGSN	- 14 -
2.5. Select TE character set +CSCS.....	- 16 -
2.6. Reset to default configuration Z	- 17 -
2.7. Subscriber number +CNUM.....	- 18 -
2.8. Set phone functionality +CFUN.....	- 19 -
2.9. Enter PIN +CPIN	- 20 -
2.10. Report mobile termination error +CMEE	- 22 -
2.11. EPS network registration status +CEREG.....	- 23 -
2.12. Show PDP address +CGPADDR	- 26 -
2.13. Preferred message format +CMGF.....	- 27 -
2.14. New Message Indications +CNMI.....	- 28 -
2.15. List message +CMGL	- 30 -
2.16. Write message to memory +CMGW	- 33 -
2.17. Delete message +CMGD.....	- 34 -
2.18. Send message +CMGS.....	- 35 -
2.19. Set the Real Time clock +CCLK.....	- 37 -
2.20. Send message from storage +CMSS.....	- 38 -
2.21. Extended signal quality +CESQ.....	- 39 -
2.22. Fixed DTE rate +IPR	- 40 -
2.23. Flow Control &K.....	- 41 -
2.24. Command Echo E	- 42 -
2.25. Controls the setting of eDRX parameters +CEDRXS	- 43 -
2.26. Retrieves eDRX parameters +CEDRXRDP	- 45 -
2.27. Restricted SIM access +CRSM.....	- 46 -
3. Altair proprietary AT commands description.....	- 48 -
3.1. Display all FW versions %VER	- 48 -
3.2. Get entity status %STATUS	- 49 -
3.3. Returns measurement for specified measurement type %MEAS	- 50 -
3.4. LTE protocol param's query override and toggle at run-time %LTECMD.....	- 54 -
3.5. Command to Instruct eCM to attach or detach the LTE network %CMATT	- 56 -

3.6. Command to start/stop any PDN connection %PDNACT.....	- 57 -
3.7. Set run-time PDN parameters %PDNSET	- 58 -
3.8. AT command to enable socket service %SOCKETCMD	- 60 -
3.9. DATA delivery for Socket service %SOCKETDATA.....	- 64 -
3.10. Notify about socket events %SOCKETEV	- 66 -
3.11. read/write/delete/list user certificates %CERTCMD.....	- 67 -
3.12. add/delete certificate (TLS) profiles %CERTCFG	- 69 -
3.13. modifies the uBoot delay %SETBDELAY	- 71 -
3.14. Convert domain name to IP address %DNSRSLV	- 72 -
3.15. Read the %CCID	- 73 -
3.16. Set configuration %SETACFG	- 74 -
3.17. Get configuration %GETACFG	- 75 -
3.18. Execute PING service %PINGCMD.....	- 76 -

1. AT commands list

1.1. Applicable products

This document applies to the following products:

Name	Application version
WSCLxADAH2Z	RK_03_02_00_00_21061_001

1.2. Important notice

- Basically, please do not use Altair Proprietary AT Commands.
When you need to use them, please contact Taiyo Yuden team.
- When using Altair Proprietary AT Commands, Please recognize the risks and responsibilities.
- Please refer to "3GPP TS 27.007" for the 3GPP AT Commands.

1.3. 3GPP supported AT commands list

Command Name	Description	Notes/Limitations	3GPP Rev	Support
AT+GMI	Request TA manufacturer identification (equals to +CGMI)	-	ITU-T V.250	Ready
AT+GMM	Request TA model identification (equals to +CGMM)	-	ITU-T V.250	Ready
AT+GMR	Request TA revision identification (equals to +CGMR)	-	ITU-T V.250	Ready
AT+CGSN	Request revision identification	-	Rev13	Ready
AT+CSCS	Select TE (Terminal) character set	Affects only SMS AT commands. Support only: "UCS2", "8859-1" (Latin), "IRA", "PCCP437"	Rev12	Ready
ATZ	TA sets all parameters to their defaults as specified by a user memory profile or by the manufacturer, and resets TA	Reset device but doesn't return values to factory default	ITU-T V.250	Ready
AT+CNUM	Subscriber number	-	Rev12	Ready
AT+CFUN	Set phone functionality	Only mode 4 (flight mode) is stored in NV memory. <fun> = 2 and 3 are not supported. <fun> = 128 and 129 are not supported.	Rev11	Ready

Command Name	Description	Notes/Limitations	3GPP Rev	Support
AT+CPIN	Enter PIN	Supported facilities: SIM PIN, SIM PUK, SIM PIN2, SIM PUK2, PH-SIM PIN, PH-NET PIN	Rev12	Ready
AT+CMEE	Report mobile termination error	-	Rev12	Ready
AT+CEREG	EPS network registration status	-	Rev12	Ready
AT+CGPADDR	Show PDP address	-	Rev12	Ready
R	+CGPADDR			
AT+CMGF	Message Format	-	Rev12	Ready
AT+CNMI	New Message Indications	Currently supports (see AT+CNMI=? result): (1,2),(0-2),(0,2),(0-2),(0-1) Use test command AT+CNMI=? to retrieve more updated limitations.	Rev12	Ready
AT+CMGL	List Message	-	Rev12	Ready
AT+CMGW	Write Message to Memory	-	Rev12	Ready
AT+CMGD	Delete Messages	-	Rev12	Ready
AT+CMGS	Send Message from host	Support Text/PDU mode.	Rev12	Ready
AT+CCLK	Set the Real Time clock	-	Rev12	Ready
AT+CMSS	Send SMS from storage	-	Rev12	Ready
AT+CESQ	Extended Signal Quality	-	Rev12	Ready
AT+IPR	Fixed DTE Interface Rate	UART0 only. Automatic detection not supported. Default rate is 115200. Command settings are stored into NV.	Rev12	Ready
AT&K	Flow Control	UART0 only. Support only &K0 and &K3	Rockwell Rev4	Ready
ATE	Command Echo, same as ATE0	-	V.250	Ready
AT+CEDRXS	Controls the setting of eDRX parameters	-	Rev13	Ready
AT+CEDRXR DP	Retrieves eDRX parameters	-	Rev13	Ready
AT+CRSM	Restricted SIM access	-	Rev12	Ready

1.4. Altair proprietary supported AT commands list

Command Name	Description	Support
AT%VER	Display all FW versions (SB/MAC/PHY/ASIPS)	Ready
AT%STATUS	Get entity status	Ready
AT%MEAS	Returns measurement for specified measurement type	Ready
AT%LTECMD	LTE protocol pram's query override and toggle at run-time	Ready
AT%CMATT	Command to Instruct eCM to attach or detach the LTE network	Ready
AT%PDNACT	Command to start/stop any PDN connection	Ready
AT%PDNSET	Set run-time PDN parameters for data PDNs exposed to host	Ready
AT%SOCKETCMD	AT command to enable socket service	Ready
AT%SOCKETDATA	DATA delivery for Socket service	Ready
AT%SOCKETEV	Notify about socket events	Ready
AT%CERTCMD	read/write/delete/list user certificates	Ready
AT%CERTCFG	add/delete certificate (TLS) profiles	Ready
AT%SETBDELAY	modifies the uBoot delay	Ready
AT%DNSRSLV	Convert domain name to IP address	Ready
AT%SETCFG	Set configuration	Ready
AT%GETCFG	Get configuration	Ready
AT%CCID	Read the ICCID	Ready

2. GPP supported AT commands description

2.1. Request manufacturer identification +GMI

Syntax

Command	Possible Responses(s)
AT+GMI	<manufacturer> +CME ERROR: <err>

Description

This command causes the DCE to transmit one or more lines of information text, determined by the manufacturer, which is intended to permit the user of the DCE to identify the manufacturer.

Typically, the text will consist of a single line containing the name of the manufacturer, but manufacturers may choose to provide more information if desired (e.g., address, telephone number for customer service, etc.).

The total number of characters, including line terminators, in the information text returned in response to this command shall not exceed 2048 characters. Note that the information text shall not contain the sequence "0<CR>" (3/0, 0/13) or "OK<CR>" (4/15, 4/11, 0/13), so that DTE can avoid false detection of the end of this information text.

Defined values

Parameter	Type	Description
<manufacturer>	characters	including line terminators, in the information text shall not exceed 2048 characters. Text shall not contain the sequence 0<CR> or OK<CR>

2.2. Request model identification +GMM

Syntax

Command	Possible Responses(s)
AT+GMM	<model> +CME ERROR: <err>

Description

This command causes the DCE to transmit one or more lines of information text, determined by the manufacturer, which is intended to permit the user of the DCE to identify the specific model of device. Typically, the text will consist of a single line containing the name of the product, but manufacturers may choose to provide any information desired.

The total number of characters, including line terminators, in the information text returned in response to this command shall not exceed 2048 characters. Note that the information text shall not contain the sequence "0<CR>" (3/0, 0/13) or "OK<CR>" (4/15, 4/11, 0/13), so that DTE can avoid false detection of the end of this information text.

Defined values

Parameter	Type	Description
<model>	characters	including line terminators, in the information text shall not exceed 2048 characters. Text shall not contain the sequence 0<CR> or OK<CR>

2.3. Request revision identification +GMR

Syntax

Command	Possible Responses(s)
AT+GMR	<revision> +CME ERROR: <err>

Description

This command causes the DCE to transmit one or more lines of information text, determined by the manufacturer, which is intended to permit the user of the DCE to identify the version, revision level or date, or other pertinent information of the device. Typically, the text will consist of a single line containing the version of the product, but manufacturers may choose to provide any information desired.

The total number of characters, including line terminators, in the information text returned in response to this command shall not exceed 2048 characters. Note that the information text shall not contain the sequence "0<CR>" (3/0, 0/13) or "OK<CR>" (4/15, 4/11, 0/13), so that DTE can avoid false detection of the end of this information text.

Defined values

Parameter	Type	Description
<revision>	characters	including line terminators, in the information text shall not exceed 2048 characters. Text shall not contain the sequence 0<CR> or OK<CR>

2.4. Request product serial number identification +CGSN

Syntax

Command	Possible Responses(s)
AT+CGSN[=<snt>]	<ul style="list-style-type: none"> ■when <snt>=0 (or omitted) and command successful <sn> ■when <snt>=1 and command successful +CGSN: <imei> ■when <snt>=2 and command successful +CGSN: <imeisv> ■when <snt>=3 and command successful +CGSN: <svn> +CME ERROR: <err>
AT+CGSN=?	<ul style="list-style-type: none"> ■when TE supports <snt> and command successful +CGSN: (list of supported <snt>s)

Description

Execution command causes the TA to return IMEI (International Mobile station Equipment Identity number) and related information to identify the MT that the TE is connected to.

Refer 3GPP TS 27.007 subclause 9.2 for possible <err> values.

Test command returns values supported as a compound value. For a TA which does not support <snt>, only OK is returned.

Defined values

Parameter	Type	Description
<snt>	integer	<ul style="list-style-type: none"> 0: returns <sn> 1: returns the IMEI (International Mobile station Equipment Identity) 2: returns the IMEISV (International Mobile station Equipment Identity and Software Version number) 3: returns the SVN (Software Version Number)
<sn>	characters	one or more lines of information text determined by the MT manufacturer. Typically, the text will consist of a single line containing the IMEI number of the MT, but manufacturers may choose to provide more information if desired. The total number of characters, including line terminators, in the information text shall not exceed 2048 characters. Text shall not contain the sequence 0<CR> or OK<CR>
<imei>	string	refer 3GPP TS 23.003 [7], subclause 6.2.1. IMEI is composed of Type Allocation Code (TAC) (8 digits), Serial Number (SNR) (6 digits) and the Check Digit (CD) (1 digit). Character set used in <imei> is as specified by command Select TE Character Set +CSCS.
<imeisv>	string	refer 3GPP TS 23.003 [7], subclause 6.2.2. The 16 digits of IMEISV are composed of Type Allocation Code (TAC) (8 digits), Serial Number (SNR) (6 digits) and the software version (SVN) (2 digits). Character set used in <imeisv> is as specified by command Select TE Character Set +CSCS.

Parameter	Type	Description
<svn>	string	<p>refer 3GPP TS 23.003 [7], subclause 6.2.2. This allows identifying different software versions of a given mobile.</p> <p>Character set used in <svn> is as specified by command Select TE Character Set +CSCS.</p> <p>NOTE:</p> <p>The default value <snt>=0 returns the information text <sn> with no command name prefixed. This has been done to retain backward compatibility. All other values of <snt> return the information text including command name prefix.</p>

Informative examples

To get <sn> which returns IMEI of the MT

AT+CGSN

490154203237518

OK

To get <imei> which returns IMEI of the MT

AT+CGSN=1

+CGSN: "490154203237518"

OK

2.5. Select TE character set +CSCS

Syntax

Command	Possible Responses(s)
AT+CSCS=[<chset>]	OK
AT+CSCS?	+CSCS: <chset>
AT+CSCS=?	+CSCS: (list of supported <chset>s)

Description

Set command informs TA which character set <chset> is used by the TE. TA is then able to convert character strings correctly between TE and MT character sets.

NOTE:

It is manufacturer specific how the internal alphabet of MT is converted to/from the TE alphabet.

Read command shows current setting and test command displays conversion schemes implemented in the TA.

Test command returns values supported as a compound value.

Defined values

Parameter	Type	Description
<chset>	string	<p>UCS2: 16-bit universal multiple-octet coded character set (see ISO/IEC10646 [32]); UCS2 character strings are converted to hexadecimal numbers from 0000 to FFFF; e.g. "004100620063" equals three 16-bit characters with decimal values 65, 98 and 99.</p> <p>8859-1: ISO 8859 Latin 1 character set</p> <p>IRA: International reference alphabet (see ITU-T Recommendation T.50 [13]).</p> <p>PCCP437: PC character set Code Page 437</p>

2.6. Reset to default configuration Z

Syntax

Command	Possible Responses(s)
ATZ	OK

Description

TA sets all parameters to their defaults as specified by a user memory profile or by the manufacturer, and resets TA.

Reset device but doesn't return values to factory default

2.7. Subscriber number +CNUM

Syntax

Command	Possible Responses(s)
AT+CNUM	+CNUM: [<alpha1>],<number1>,<type1>[,<speed>,<service>[,<itc>]] +CNUM: [<alpha2>],<number2>,<type2>[,<speed>,<service>[,<itc>]][...] +CME ERROR: <err>
AT+CNUM=?	OK

Description

Action command returns the MSISDNs related to the subscriber (this information can be stored in the SIM/UICC or in the MT). When storing information in the SIM/UICC, if the currently selected card slot contains a SIM card or a UICC with an active GSM application, the information is stored in the EFMSISDN under DFTelecom. If the currently selected card slot contains a UICC with an active USIM application, the information is stored in the EFMSISDN under ADFUSIM). If subscriber has different MSISDN for different services, each MSISDN is returned on a separate line. Refer 3GPP TS 27.007 subclause 9.2 for possible <err> values.

Defined values

Parameter	Type	Description
<alphax>	string	used character set should be the one selected with command Select TE Character Set +CSCS
<numberx>	string	string type phone number of format specified by <typex>
<typex>	integer	type of address octet in integer format (refer 3GPP TS 24.008 [8] subclause 10.5.4.7)
<speed>	integer	integer type as defined in subclause 6.7
<service>	integer	0: asynchronous modem 1: synchronous modem 2: PAD Access (asynchronous) 3: Packet Access (synchronous) 4: voice 5: fax all other values below 128 are reserved by the present document
<itc>	integer	0: 3,1 kHz 1: UDI

2.8. Set phone functionality +CFUN

Syntax

Command	Possible Responses(s)
AT+CFUN=[<fun>[,<rst>]]	+CME ERROR: <err>
AT+CFUN?	+CFUN: <fun> +CME ERROR: <err>
AT+CFUN=?	+CFUN: (list of supported <fun>s),(list of supported <rst>s) +CME ERROR: <err>

Description

Set command selects the level of functionality <fun> in the MT. Level "full functionality" is where the highest level of power is drawn. "Minimum functionality" is where minimum power is drawn. Level of functionality between these may also be specified by manufacturers. When supported by manufacturers, MT resetting with <rst> parameter may be utilized. Refer 3GPP TS 27.007 subclause 9.2 for possible <err> values.

NOTE:

It is manufacturer specific if this command affects network registration. Command Operator Selection +COPS is used to force registration/deregistration.

Read command returns the current setting of <fun>.

Test command returns values supported by the MT as compound values.

Defined values

Parameter	Type	Description
<fun>	integer	0: minimum functionality 1: full functionality. Enable (turn on) the transmit and receive RF circuits for all supported radio access technologies. For MTs supporting +CSRA, this equals the RATs indicated by the response of +CSRA=?. Current +CSRA setting is ignored. It is not required that the MT transmit and receive RF circuits are in a disabled state for this setting to have effect. 4: disable (turn off) both MT transmit and receive RF circuits
<rst>	integer	0: do not reset the MT before setting it to <fun> power level NOTE: This shall be always default when <rst> is not given.

2.9. Enter PIN +CPIN

Syntax

Command	Possible Responses(s)
AT+CPIN=<pin>[,<newpin>]	+CME ERROR: <err>
AT+CPIN?	+CPIN: <code> +CME ERROR: <err>
AT+CPIN=?	OK

Description

Set command sends to the MT a password which is necessary before it can be operated (SIM PIN, SIM PUK, PH SIM PIN, etc.). If the PIN is to be entered twice, the TA shall automatically repeat the PIN. If no PIN request is pending, no action is taken towards MT and an error message, +CME ERROR, is returned to TE.

NOTE:

SIM PIN, SIM PUK, PH-SIM PIN, PH-FSIM PIN, PH-FSIM PUK, SIM PIN2 and SIM PUK2 refer to the PIN of the selected application on the UICC. For example, in an UTRAN context, the selected application on the currently selected UICC should be a USIM and the SIM PIN then represents the PIN of the selected USIM. See 3GPP TS 31.101 [65] for further details on application selection on the UICC.

If the PIN required is SIM PUK or SIM PUK2, the second pin is required. This second pin, <newpin>, is used to replace the old pin in the SIM.

NOTE:

Commands which interact with MT that are accepted when MT is pending SIM PIN, SIM PUK, or PH SIM are: +CGMI, +CGMM, +CGMR, +CGSN, D112; (emergency call), +CPAS, +CFUN, +CPIN, +CPINR, +CDIS (read and test command only), and +CIND (read and test command only). It is implementation specific whether additional commands can be accepted when MT is pending SIM PIN, SIM PUK, or PH SIM.

Read command returns an alphanumeric string indicating whether some password is required or not.

Defined values

Parameter	Type	Description
<code>	string	<p>READY: MT is not pending for any password</p> <p>SIM PIN: MT is waiting SIM PIN to be given</p> <p>SIM PUK: MT is waiting SIM PUK to be given</p> <p>PH-SIM PIN: MT is waiting phone to SIM card password to be given</p> <p>SIM PIN2: MT is waiting SIM PIN2 to be given (this <code> is recommended to be returned only when the last executed command resulted in PIN2 authentication failure (i.e. +CME ERROR: 17); if PIN2 is not entered right after the failure, it is recommended that MT does not block its operation)</p> <p>SIM PUK2: MT is waiting SIM PUK2 to be given (this <code> is recommended to be returned only when the last executed command resulted in PUK2 authentication failure (i.e. +CME ERROR: 18); if PUK2 and new PIN2 are not entered right after the failure, it is recommended that MT does not block its operation)</p> <p>PH-NET PIN: MT is waiting network personalization password to be given</p>

2.10. Report mobile termination error +CMEE

Syntax

Command	Possible Responses(s)
AT+CMEE=[<n>]	OK
AT+CMEE?	+CMEE: <n>
AT+CMEE=?	+CMEE: (list of supported <n>s)

Description

Set command disables or enables the use of final result code +CME ERROR: <err> as an indication of an error relating to the functionality of the MT. When enabled, MT related errors cause +CME ERROR: <err> final result code instead of the regular ERROR final result code. ERROR is returned normally when error is related to syntax, invalid parameters, or TA functionality.

Read command returns the current setting of <n>.

Test command returns values supported as a compound value.

Defined values

Parameter	Type	Description
<n>	integer	0: disable +CME ERROR: <err> result code and use ERROR instead 1: enable +CME ERROR: <err> result code and use numeric <err> values (refer 3GPP TS 27.007 subclause 9.2) 2: enable +CME ERROR: <err> result code and use verbose <err> values (refer 3GPP TS 27.007 subclause 9.2)

2.11. EPS network registration status +CEREG

Syntax

Command	Possible Responses(s)
AT+CEREG=[<n>]	+CME ERROR: <err>
AT+CEREG?	<p>■when <n>=0, 1, 2 or 3 and command successful</p> <p>+CEREG: <n>,<stat>[,<tac>],[<ci>],[<AcT>[,<cause_type>,<reject_cause>]]]</p> <p>■when <n>=4 or 5 and command successful</p> <p>+CEREG: <n>,<stat>[,<lac>],[<ci>],[<AcT>],[<rac>][,<cause_type>],[<reject_cause>][,<Active-Time>],[<Periodic-TAU>]]]</p>
AT+CEREG=?	+CEREG: (list of supported <n>s)

Description

The set command controls the presentation of an unsolicited result code +CEREG: <stat> when <n>=1 and there is a change in the MT's EPS network registration status in E-UTRAN, or unsolicited result code +CEREG: <stat>[,<tac>],[<ci>],[<AcT>]] when <n>=2 and there is a change of the network cell in EUTRAN. The parameters <AcT>, <tac> and <ci> are provided only if available. The value <n>=3 further extends the unsolicited result code with [<cause_type>,<reject_cause>], when available, when the value of <stat> changes.

If the UE wants to apply PSM for reducing its power consumption, see +CPSMS command and 3GPP TS 23.682 [149], the set command controls the presentation of an unsolicited result code +CEREG:

<stat>[,<tac>],[<ci>],[<AcT>][,<cause_type>],[<reject_cause>][,<Active-Time>],[<Periodic-TAU>]]]. When <n>=4 the unsolicited result code will provide the UE with additional information for the Active Time value and the extended periodic TAU value if there is a change of the network cell in E-UTRAN. The value <n>=5 further enhances the unsolicited result code with <cause_type> and <reject_cause> when the value of <stat> changes. The parameters <AcT>, <tac>, <ci>, <cause_type>, <reject_cause>, <Active-Time> and <Periodic-TAU> are provided only if available.

Refer 3GPP TS 27.007 subclause 9.2 for possible <err> values.

The read command returns the status of result code presentation and an integer <stat> which shows whether the network has currently indicated the registration of the MT. Location information elements <tac>, <ci> and <AcT>, if available, are returned only when <n>=2 and MT is registered in the network. The parameters [<cause_type>,<reject_cause>], if available, are returned when <n>=3.

Test command returns values supported as a compound value.

Defined values

Parameter	Type	Description
<n>	integer	<p>0: disable network registration unsolicited result code</p> <p>1: enable network registration unsolicited result code +CEREG: <stat></p> <p>2: enable network registration and location information unsolicited result code+CEREG: <stat>[,<tac>],[<ci>],[<AcT>]]</p> <p>3: enable network registration, location information and EMM cause value information unsolicited result code +CEREG: <stat>[,<tac>],[<ci>],[<AcT>],[<cause_type>,<reject_cause>]]</p> <p>4: For a UE that wants to apply PSM, enable network registration and location information unsolicited result code +CEREG: <stat>[,<tac>],[<ci>],[<AcT>][, [, [<Active-Time>],[<Periodic-TAU>]]]]</p> <p>5: For a UE that wants to apply PSM, enable network registration, location information and EMM cause value information unsolicited result code +CEREG: <stat>[,<tac>],[<ci>],[<AcT>][, [<cause_type>],[<reject_cause>][, [<Active-Time>],[<Periodic-TAU>]]]]</p>
<stat>	integer	<p>indicates the EPS registration status</p> <p>0: not registered, MT is not currently searching an operator to register to</p> <p>1: registered, home network</p> <p>2: not registered, but MT is currently trying to attach or searching an operator to register to</p> <p>3: registration denied</p> <p>4: unknown (e.g. out of E-UTRAN coverage)</p> <p>5: registered, roaming</p> <p>6: registered for "SMS only", home network (not applicable)</p> <p>7: registered for "SMS only", roaming (not applicable)</p> <p>8: attached for emergency bearer services only (See NOTE)</p> <p>9: registered for "CSFB not preferred", home network (not applicable)</p> <p>10: registered for "CSFB not preferred", roaming (not applicable)</p> <p>NOTE: 3GPP TS 24.008 [8] and 3GPP TS 24.301 [83] specify the condition when the MS is considered as attached for emergency bearer services.</p>
<tac>	string	two byte tracking area code in hexadecimal format (e.g. "00C3" equals 195 in decimal)
<ci>	string	four byte E-UTRAN cell ID in hexadecimal format
<AcT>	integer	indicates the access technology of the serving cell 7: E-UTRAN
<cause_type>	integer	indicates the type of <reject_cause>. 0: Indicates that <reject_cause> contains an EMM cause value, see 3GPP TS 24.301 [83] Annex A. 1: Indicates that <reject_cause> contains a manufacturer-specific cause.
<reject_cause>	integer	contains the cause of the failed registration. The value is of type as defined by <cause_type>.

Parameter	Type	Description
<Active-Time>	string	one byte in an 8 bit format. Indicates the Active Time value (T3324) allocated to the UE in E-UTRAN. The Active Time value is coded as one byte (octet 3) of the GPRS Timer 2 information element coded as bit format (e.g. "00100100" equals 4 minutes). For the coding and the value range, see the GPRS Timer 2 IE in 3GPP TS 24.008 [8] Table 10.5.163/3GPP TS 24.008. See also 3GPP TS 23.682 [149] and 3GPP TS 23.401 [82].
<Periodic-TAU>	string	one byte in an 8 bit format. Indicates the extended periodic TAU value (T3412) allocated to the UE in E-UTRAN. The extended periodic TAU value is coded as one byte (octet 3) of the GPRS Timer 3 information element coded as bit format (e.g. "01000111" equals 70 hours). For the coding and the value range, see the GPRS Timer 3 IE in 3GPP TS 24.008 [8] Table 10.5.163a/3GPP TS 24.008. See also 3GPP TS 23.682 [149] and 3GPP TS 23.401 [82].

2.12. Show PDP address +CGPADDR

Syntax

Command	Possible Responses(s)
AT+CGPADDR[=<cid>[,<cid>[,...]]]	[+CGPADDR: <cid>[,<PDP_addr_1>[,<PDP_addr_2>]]] [<CR><LF>+CGPADDR: <cid>[,<PDP_addr_1>[,<PDP_addr_2>]] [...]]
AT+CGPADDR=?	+CGPADDR: (list of defined <cid>s)

Description

The execution command returns a list of PDP addresses for the specified context identifiers. If no <cid> is specified, the addresses for all defined contexts are returned.

The test command returns a list of defined <cid>s.

Defined values

Parameter	Type	Description
<cid>	integer	specifies a particular PDP context definition (see the +CGDCONT and +CGDSCONT commands)
<PDP_addr_1>, <PDP_addr_2>	string	each is a string type that identifies the MT in the address space applicable to the PDP. The address may be static or dynamic. For a static address, it will be the one set by the +CGDCONT and +CGDSCONT commands when the context was defined. For a dynamic address it will be the one assigned during the last PDP context activation that used the context definition referred to by <cid>. Both <PDP_addr_1> and <PDP_addr_2> are omitted if none is available. Both <PDP_addr_1> and <PDP_addr_2> are included when both IPv4 and IPv6 addresses are assigned, with <PDP_addr_1> containing the IPv4 address and <PDP_addr_2> containing the IPv6 address. The string is given as dot-separated numeric (0-255) parameter of the form: a1.a2.a3.a4 for IPv4 and a1.a2.a3.a4.a5.a6.a7.a8.a9.a10.a11.a12.a13.a14.a15.a16 for IPv6. When +CGPIAF is supported, its settings can influence the format of the IPv6 address in parameter <PDP_addr_1> or <PDP_addr_2> returned with the execute form of +CGPADDR. NOTE: In dual-stack terminals (<PDP_type> IPV4V6), the IPv6 address will be provided in <PDP_addr_2>. For terminals with a single IPv6 stack (<PDP_type> IPV6) or due to backwards compatibility, the IPv6 address can be provided in parameter <PDP_addr_1>.

2.13. Preferred message format +CMGF

Syntax

Command	Possible Responses(s)
AT+CMGF=[<mode>]	OK
AT+CMGF?	+CMGF: <mode>
AT+CMGF=?	+CMGF: (list of supported <mode>s)

Description

Set command tells the TA, which input and output format of messages to use. <mode> indicates the format of messages used with send, list, read and write commands and unsolicited result codes resulting from received messages. Mode can be either PDU mode (entire TP data units used) or text mode (headers and body of the messages given as separate parameters). Text mode uses the value of parameter <chset> specified by command Select TE Character Set +CSCS to inform the character set to be used in the message body in the TA-TE interface.

Test command returns supported modes as a compound value.

Defined values

Parameter	Type	Description
<mode>	integer	0: PDU mode 1: text mode

2.14. New Message Indications +CNMI

Syntax

Command	Possible Responses(s)
AT+CNMI=[<mode>,<mt>,<bm>,<ds>,<bfr>]]]]	+CMS ERROR: <err>
AT+CNMI?	+CNMI: <mode>,<mt>,<bm>,<ds>,<bfr>
AT+CNMI=?	+CNMI: (list of supported <mode>s),(list of supported <mt>s),(list of supported <bm>s),(list of supported <ds>s),(list of supported <bfr>s)

Description

Set command selects the procedure, how receiving of new messages from the network is indicated to the TE when TE is active, e.g. DTR signal is ON. If TE is inactive (e.g. DTR signal is OFF), message receiving should be done as specified in 3GPP TS 23.038 [2].

NOTE:

When DTR signal is not available or the state of the signal is ignored (V.25ter command &D0), reliable message transfer can be assured by using +CNMA acknowledgement procedure.

<mode> controls the processing of unsolicited result codes specified within this command, <mt> sets the result code indication routing for SMS-DELIVERs, <bm> for CBMs and <ds> for SMS-STATUS-REPORTs. <bfr> defines the handling method for buffered result codes when <mode> 1, 2 or 3 is enabled. If ME does not support requested item (although TA does), final result code +CMS ERROR: <err> is returned.

Test command gives the settings supported by the TA as compound values.

NOTE:

Command Select Message Service +CSMS should be used to detect ME support of mobile terminated SMS and CBMs, and to define whether a message routed directly to TE should be acknowledged or not (refer command +CNMA).

Defined values

Parameter	Type	Description
<mode>	integer	<p>NOTE:</p> <p>The buffering mechanism may as well be located in the ME; the setting affects only to unsolicited result codes specified within this command):</p> <p>1: Discard indication and reject new received message unsolicited result codes when TA-TE link is reserved (e.g. in on-line data mode). Otherwise forward them directly to the TE.</p> <p>2: Buffer unsolicited result codes in the TA when TA-TE link is reserved (e.g. in on-line data mode) and flush them to the TE after reservation. Otherwise forward them directly to the TE.</p> <p>NOTE:</p> <p>It is possible that ME/TA result code buffer is in volatile memory. In this case messages may get lost if the power of ME/TA is switched off before codes are sent to TE. Thus, it is not recommended to use direct message routing (<mt>=2 or 3, <bm>=2 or 3, or <ds>=1) with <mode> value 0 or 2.</p>

Parameter	Type	Description
<mt>	integer	<p>NOTE:</p> <p>If AT command interface is acting as the only display device, the ME must support storing of class 0 messages and messages in the message waiting indication group (discard message).</p> <p>0: No SMS-DELIVER indications are routed to the TE.</p> <p>1: If SMS-DELIVER is stored into ME/TA, indication of the memory location is routed to the TE using unsolicited result code: +CMTI: <mem>,<index></p> <p>2: SMS-DELIVERs (except class 2 messages and messages in the message waiting indication group (store message)) are routed directly to the TE using unsolicited result code: +CMT: [<alpha>],<length><CR><LF><pdu> (PDU-mode enabled); or +CMT: <oa>,<alpha>,<scts>[,<tooa>,<fo>,<pid>,<dc>,<sca>,<tosca>,<length>]<CR><LF><data> (text mode enabled; about parameters in italics, refer command Show Text Mode Parameters +CSDH). If ME has its own display device then class 0 messages and messages in the message waiting indication group (discard message) may be copied to both ME display and to TE. In this case, ME shall send the acknowledgement to the network.</p> <p>Class 2 messages and messages in the message waiting indication group (store message) result in indication as defined in <mt>=1.</p>
<bm>	integer	<p>0: No CBM indications are routed to the TE.</p> <p>1: If CBM is stored into ME/TA, indication of the memory location is routed to the TE using unsolicited result code: [not supported] +CBMI: <mem>,<index></p> <p>2: New CBMs are routed directly to the TE using unsolicited result code: +CBM: <length><CR><LF><pdu> (PDU mode enabled); or +CBM: <sn>,<mid>,<dc>,<page>,<pages><CR><LF><data> (text mode enabled)</p> <p>If ME supports data coding groups which define special routing also for messages other than class 3 (e.g. (U)SIM specific messages), ME may choose not to route messages of such data coding schemes into TE (indication of a stored CBM may be given as defined in <bm>=1).</p>
<ds>	integer	<p>0: No SMS-STATUS-REPORTs are routed to the TE.</p> <p>1: SMS-STATUS-REPORTs are routed to the TE using unsolicited result code: +CDS: <length><CR><LF><pdu> (PDU mode enabled); or +CDS: <fo>,<mr>,<ra>,<tora>,<scts>,<dt>,<st> (text mode enabled)</p> <p>2: If SMS-STATUS-REPORT is stored into ME/TA, indication of the memory location is routed to the TE using unsolicited result code: +CDSI: <mem>,<index></p>
<bfr>	integer	<p>0: TA buffer of unsolicited result codes defined within this command is flushed to the TE when <mode> 1...3 is entered (OK response shall be given before flushing the codes).</p> <p>1: TA buffer of unsolicited result codes defined within this command is cleared when <mode> 1...3 is entered.</p>

2.15. List message +CMGL

Syntax

Command	Possible Responses(s)
AT+CMGL[=<stat>]	<p>if text mode (+CMGF=1), command successful and SMS-SUBMITs and/or SMS-DELIVERs:</p> <p>+CMGL: <index>, <stat>, <oa/da>, [<alpha>], [<scts>][, <tooa/toda>, <length>]<CR><LF><data><CR><LF></p> <p>+CMGL: <index>, <stat>, <da/oa>, [<alpha>], [<scts>][, <tooa/toda>, <length>]<CR><LF><data>[...]</p> <p>if text mode (+CMGF=1), command successful and SMS-STATUS-REPORTs:</p> <p>+CMGL: <index>, <stat>, <fo>, <mr>, [<ra>], [<tora>], <scts>, <dt>, <st> <CR><LF></p> <p>+CMGL: <index>, <stat>, <fo>, <mr>, [<ra>], [<tora>], <scts>, <dt>, <st> [...]</p> <p>if text mode (+CMGF=1), command successful and SMS-COMMANDs:</p> <p>+CMGL: <index>, <stat>, <fo>, <ct> <CR><LF></p> <p>+CMGL: <index>, <stat>, <fo>, <ct> [...]</p> <p>if text mode (+CMGF=1), command successful and CBM storage:</p> <p>+CMGL: <index>, <stat>, <sn>, <mid>, <page>, <pages> <CR><LF><data><CR><LF></p> <p>+CMGL: <index>, <stat>, <sn>, <mid>, <page>, <pages> <CR><LF><data>[...]</p> <p>if PDU mode (+CMGF=0) and command successful:</p> <p>+CMGL: <index>, <stat>, [<alpha>], <length> <CR><LF> <pdu> <CR><LF> +CMGL: <index>, <stat>, [<alpha>], <length> <CR><LF> <pdu> [...]</p> <p>otherwise:</p> <p>+CMS ERROR: <err></p>
AT+CMGL=?	+CMGL: (list of supported <stat>s)

Description

Execution command returns messages with status value <stat> from message storage <mem1> to the TE. About text mode parameters in italics, refer command Show Text Mode Parameters +CSDH. If status of the message is 'received unread', status in the storage changes to 'received read'. If listing fails, final result code +CMS ERROR: <err> is returned. See chapter Message Service Failure Result Code for <err> values.

NOTE:

If the selected <mem1> can contain different types of SMs (e.g. SMS-DELIVERs, SMS-SUBMITs, SMS STATUS-REPORTs and SMS-COMMANDs), the response may be a mix of the responses of different SM types. TE application can recognize the response format by examining the third response parameter. Test command shall give a list of all status values supported by the TA.

Defined values

Parameter	Type	Description
<stat>	string	indicates the status of message in memory: "REC UNREAD": received unread message (i.e. new message) "REC READ": received read message "STO UNSENT": stored unsent message (only applicable to SMS) "STO SENT": stored sent message (only applicable to SMS) "ALL": all messages (only applicable to +CMGL command)
<index>	integer	value in the range of location numbers supported by the associated memory
<alpha>	string	implementation of this feature is manufacturer specific; used character set should be the one selected with command Select TE Character Set +CSCS (see definition of this command in 3GPP TS 27.007 [9])
<scts>	string	3GPP TS 23.040 [3] TP-Service-Centre-Time-Stamp in time-string format (refer <dt>)
<oa>	string	BCD numbers (or GSM 7 bit default alphabet characters) are converted to characters of the currently selected TE character set (refer command +CSCS in TS 07.07); type of address given by <tooa>
<tora>	number	3GPP TS 24.011 [6] TP-Recipient-Address Type-of-Address octet in integer format (default refer <toda>)

Parameter	Type	Description
<data>	string	<p>In the case of SMS: 3GPP TS 23.040 [3] TP-User-Data in text mode responses; format:</p> <ul style="list-style-type: none"> -if <dc> indicates that 3GPP TS 23.038 [2] GSM 7 bit default alphabet is used and <fo> indicates that 3GPP TS 23.040 [3] TP-User-Data-Header-Indication is not set: -if TE character set other than "HEX" (refer command Select TE Character Set +CSCS in 3GPP TS 27.007 [9]): ME/TA converts GSM alphabet into current TE character set according to rules of Annex A -if TE character set is "HEX": ME/TA converts each 7-bit character of GSM 7 bit default alphabet into two IRA character long hexadecimal number (e.g. character Ψ (GSM 7 bit default alphabet decimal 23) is presented as 17 (IRA 49 and 55)) -if <dc> indicates that 8-bit or UCS2 data coding scheme is used, or <fo> indicates that 3GPP TS 23.040 [3] TP-User-Data-Header-Indication is set: ME/TA converts each 8-bit octet into two IRA character long hexadecimal number (e.g. octet with integer value 42 is presented to TE as two characters 2A (IRA 50 and 65)) <p>In the case of CBS: 3GPP TS 23.041 [4] CBM Content of Message in text mode responses; format:</p> <ul style="list-style-type: none"> -if <dc> indicates that 3GPP TS 23.038 [2] GSM 7 bit default alphabet is used: -if TE character set other than "HEX" (refer command +CSCS in 3GPP TS 27.007 [9]): ME/TA converts GSM alphabet into current TE character set according to rules of Annex A -if TE character set is "HEX": ME/TA converts each 7-bit character of the GSM 7 bit default alphabet into two IRA character long hexadecimal number -if <dc> indicates that 8-bit or UCS2 data coding scheme is used: ME/TA converts each 8-bit octet into two IRA character long hexadecimal number
<length>	integer	integer type value indicating in the text mode (+CMGF=1) the length of the message body <data> > (or <cdata>) in characters; or in PDU mode (+CMGF=0), the length of the actual TP data unit in octets (i.e. the RP layer SMSC address octets are not counted in the length)
<dt>	string	"yy/MM/dd,hh:mm:ss±zz", where characters indicate year (two last digits), month, day, hour, minutes, seconds and time zone. E.g. 6th of May 1994, 22:10:00 GMT+2 hours equals to "94/05/06,22:10:00+08"
<fo>	string	first octet of 3GPP TS 23.040 [3] SMS-DELIVER, SMS-SUBMIT (default 17), SMS-STATUS-REPORT, or SMS-COMMAND (default 2) in integer format

2.16. Write message to memory +CMGW

Syntax

Command	Possible Responses(s)
if text mode (+CMGF=1): AT+CMGW[=<oa/da>[,<tooa/toda>[,<stat>]]]<CR> text is entered<ctrl-Z/ESC>	+CMGW: <index> +CMS ERROR: <err>
if PDU mode (+CMGF=0): AT+CMGW=<length>[,<stat>]<CR>PDU is given<ctrl-Z/ESC> AT+CMGW=?	+CMGW: <index> +CMS ERROR: <err> OK

Description

Execution command stores message (either SMS-DELIVER or SMS-SUBMIT) to memory storage <mem2>. Memory location <index> of the stored message is returned. By default message status will be set to 'stored unsend', but parameter <stat> allows also other status values to be given. The entering of text is done similarly as specified in command Send Message +CMGS. If writing fails, final result code +CMS ERROR: <err> is returned. See chapter Message Service Failure Result Code for <err> values.

NOTE:SMS-COMMANDs and SMS-STATUS-REPORTs can not be stored in text mode.

Defined values

Parameter	Type	Description
<stat>	integer	indicates the status of message in memory: "REC UNREAD": received unread message (i.e. new message) "REC READ": received read message "STO UNSENT": stored unsend message (only applicable to SMSs) "STO SENT": stored send message (only applicable to SMSs) "ALL": all messages (only applicable to +CMGL command)
<index>	integer	value in the range of location numbers supported by the associated memory
<oa>	string	BCD numbers (or GSM 7 bit default alphabet characters) are converted to characters of the currently selected TE character set (refer command +CSCS in TS 07.07); type of address given by <tooa>
<tooa>	string	3GPP TS 24.011 [6] TP-Originating-Address Type-of-Address octet in integer format (default refer <toda>)
<toda>	string	3GPP TS 24.011 [6] TP-Destination-Address Type-of-Address octet in integer format (when first character of <da> is + (IRA 43) default is 145, otherwise default is 129)
<da>	string	3GPP TS 23.040 [3] TP-Destination-Address Address-Value field in string format; BCD numbers (or GSM 7 bit default alphabet characters) are converted to characters of the currently selected TE character set (refer command +CSCS in 3GPP TS 27.007 [9]); type of address given by <toda>

2.17. Delete message +CMGD

Syntax

Command	Possible Responses(s)
AT+CMGD=<index>[,<delflag>]	+CMS ERROR: <err>
AT+CMGD=?	+CMGD: (list of supported <index>s)[,(list of supported <delflag>s)]

Description

Execution command deletes message from preferred message storage <mem1> location <index>. If <delflag> is present and not set to 0 then the ME shall ignore <index> and follow the rules for <delflag> shown below. If deleting fails, final result code +CMS ERROR: <err> is returned. See chapter Message Service Failure Result Code for <err> values.

Test command shows the valid memory locations and optionally the supported values of <delflag>.

Defined values

Parameter	Type	Description
<delflag>	integer	indicating multiple message deletion request as follows: 0: Delete the message specified in <index> 1: Delete all read messages from preferred message storage, leaving unread messages and stored mobile originated messages (whether sent or not) untouched 2: Delete all read messages from preferred message storage and sent mobile originated messages, leaving unread messages and unsent mobile originated messages untouched 3: Delete all read messages from preferred message storage, sent and unsent mobile originated messages leaving unread messages untouched. 4: Delete all messages from preferred message storage including unread messages.
<index>	integer	value in the range of location numbers supported by the associated memory

2.18. Send message +CMGS

Syntax

Command	Possible Responses(s)
if text mode (+CMGF=1): AT+CMGS=<da>[,<toda>]<CR> text is entered<ctrl-Z/ESC>	if text mode (+CMGF=1) and sending successful: +CMGS: <mr>[,<scts>] if sending fails: +CMS ERROR: <err>
if PDU mode (+CMGF=0): AT+CMGS=<length><CR> PDU is given<ctrl-Z/ESC>	if PDU mode (+CMGF=0) and sending successful: +CMGS: <mr>[,<ackpdu>] if sending fails: +CMS ERROR: <err>
+CMGS=?	OK

Description

Execution command sends message from a TE to the network (SMS-SUBMIT). Message reference value <mr> is returned to the TE on successful message delivery. Optionally (when +CSMS <service> value is 1 and network supports) <scts> is returned. Values can be used to identify message upon unsolicited delivery status report result code. If sending fails in a network or an ME error, final result code +CMS ERROR: <err> is returned. See chapter Message Service Failure Result Code for a list of <err> values. This command should be abortable.

Execution command sends message from a TE to the network (SMS-SUBMIT). Message reference value <mr> is returned to the TE on successful message delivery. Value can be used to identify message upon unsolicited delivery status report result code. If sending fails in a network or an ME error, final result code +CMS ERROR: <err> is returned. See chapter Message Service Failure Result Code for a list of <err> values. This command should be abortable.

- entered text (3GPP TS 23.040 [3] TP-Data-Unit) is sent to address <da> and all current settings (refer Set Text Mode Parameters +CSMP and Service Centre Address +CSCA) are used to construct the actual PDU in ME/TA.
- the TA shall send a four character sequence <CR><LF><greater_than><space> (IRA 13, 10, 62, 32) after command line is terminated with <CR>; after that text can be entered from TE to ME/TA.
- the DCD signal shall be in ON state while text is entered.
- the echoing of entered characters back from the TA is controlled by V.25ter echo command E.
- the entered text should be formatted as follows:
 - if <dc> (set with +CSMP) indicates that 3GPP TS 23.038 [2] GSM 7 bit default alphabet is used and <fo> indicates that 3GPP TS 23.040 [3] TP-User-Data-Header-Indication is not set:
 - if TE character set other than "HEX" (refer command Select TE Character Set +CSCS in 3GPP TS 27.007 [9]): ME/TA converts the entered text into the GSM 7 bit default alphabet according to rules of Annex A; backspace can be used to delete last character and carriage returns can be used (previously mentioned four character sequence shall be sent to the TE after every carriage return entered by the user);
 - if TE character set is "HEX": the entered text should consist of two IRA character long hexadecimal numbers which ME/TA converts into the GSM 7 bit default alphabet characters. (e.g. 17 (IRA 49 and 55) will be

converted to character (GSM 7 bit default alphabet 23)).

- if <dcs> indicates that 8-bit or UCS2 data coding scheme is used or <fo> indicates that 3GPP TS 23.040 [3] TP-User-Data-Header-Indication is set: the entered text should consist of two IRA character long hexadecimal numbers which ME/TA converts into 8-bit octet (e.g. two characters 2A (IRA 50 and 65) will be converted to an octet with integer value 42).
- sending can be cancelled by giving <ESC> character (IRA 27).
- <ctrl-Z> (IRA 26) must be used to indicate the ending of the message body.

Defined values

Parameter	Type	Description
<scts>	string	3GPP TS 23.040 [3] TP-Service-Centre-Time-Stamp in time-string format (refer <dt>)
<mr>	number	3GPP TS 23.040 [3] TP-Message-Reference in integer format
<toda>	string	3GPP TS 24.011 [6] TP-Destination-Address Type-of-Address octet in integer format (when first character of <da> is + (IRA 43) default is 145, otherwise default is 129)
<da>	string	3GPP TS 23.040 [3] TP-Destination-Address Address-Value field in string format; BCD numbers (or GSM 7 bit default alphabet characters) are converted to characters of the currently selected TE character set (refer command +CSCS in 3GPP TS 27.007 [9]); type of address given by <toda>

2.19. Set the Real Time clock +CCLK

Syntax

Command	Possible Responses(s)
AT+CCLK=<time>	+CME ERROR: <err>
AT+CCLK?	+CCLK: <time> +CME ERROR: <err>
AT+CCLK=?	OK

Description

Set command sets the real-time clock of the MT. If setting fails in an MT error, +CME ERROR: <err> is returned.

Refer 3GPP TS 27.007 subclause 9.2 for possible <err> values.

Read command returns the current setting of the clock.

Defined values

Parameter	Type	Description
<time>	string	format is "yy/MM/dd,hh:mm:ss+zz", where characters indicate year (two last digits), month, day, hour, minutes, seconds and time zone (indicates the difference, expressed in quarters of an hour, between the local time and GMT; range -96...+96). E.g. 6th of May 1994, 22:10:00 GMT+2 hours equals to "94/05/06,22:10:00+08" NOTE: If MT does not support time zone information then the three last characters of <time> are not returned by +CCLK?.

2.20. Send message from storage +CMSS

Syntax

Command	Possible Responses(s)
AT+CMSS=<index>[,<da>[,<toda>]]	if text mode (+CMGF=1) and sending successful: +CMSS: <mr>[,<scts>] if sending fails: +CMS ERROR: <err>
AT+CMSS=?	OK

Description

Execution command sends message with location value <index> from preferred message storage <mem2> to the network (SMS-SUBMIT or SMS-COMMAND). If new recipient address <da> is given given for SMS-SUBMIT, it shall be used instead of the one stored with the message. Reference value <mr> is returned to the TE on successful message delivery. Optionally (when +CSMS <service> value is 1 and network supports) <scts> is returned. Values can be used to identify message upon unsolicited delivery status report result code. If sending fails in a network or an ME error, final result code +CMS ERROR: <err> is returned.

Defined values

Parameter	Type	Description
<index>	integer	value in the range of location numbers supported by the associated memory

2.21. Extended signal quality +CESQ

Syntax

Command	Possible response(s)
AT+CESQ	+CESQ: <rxlev>,<ber>,<rscp>,<ecno>,<rsrq>,<rsrp> +CME ERROR: <err>
AT+CESQ=?	+CESQ: (list of supported <rxlev>s),(list of supported <ber>s),(list of supported <rscp>s),(list of supported <ecno>s),(list of supported <rsrq>s),(list of supported <rsrp>s)

Description

Execution command returns received signal quality parameters. <rxlev> and <ber> are set to value 99. <rscp> and <ecno> are set to 255. Refer 3GPP TS 27.007 subclause 9.2 for possible <err> values. Test command returns values supported as compound values.

Defined values

Parameter	Type	Description
<rxlev>	integer	received signal strength level (see 3GPP TS 45.008 [20] subclause 8.1.4). 99 : not known or not detectable
<ber>	integer	channel bit error rate (in percent) 99 : not known or not detectable
<rscp>	integer	received signal code power (see 3GPP TS 25.133 [95] subclause 9.1.1.3 and 3GPP TS 25.123 [96] subclause 9.1.1.1.3). 255 : not known or not detectable
<ecno>	integer	ratio of the received energy per PN chip to the total received power spectral density (see 3GPP TS 25.133 [95] subclause). 255 : not known or not detectable
<rsrq>	integer	reference signal received quality (see 3GPP TS 36.133 [96] subclause 9.1.7). 0 : rsrq < -19.5 dB 1 : -19.5 dB ≤ rsrq < -19 dB 2 : -19 dB ≤ rsrq < -18.5 dB : : : : 32 : -4 dB ≤ rsrq < -3.5 dB 33 : -3.5 dB ≤ rsrq < -3 dB 34 : -3 dB ≤ rsrq 255 : not known or not detectable
<rsrp>	integer	reference signal received power (see 3GPP TS 36.133 [96] subclause 9.1.4). 0 : rsrp < -140 dBm 1 : -140 dBm ≤ rsrp < -139 dBm 2 : -139 dBm ≤ rsrp < -138 dBm : : : : 95 : -46 dBm ≤ rsrp < -45 dBm 96 : -45 dBm ≤ rsrp < -44 dBm 97 : -44 dBm ≤ rsrp 255 : not known or not detectable

2.22. Fixed DTE rate +IPR

Syntax

Command	Possible response(s)
AT+IPR=<rate>	OK
AT+IPR?	+IPR: <rate>
AT+IPR=?	+IPR:(list of supported autodetectable <rate> values)[,(list of fixed-only <rate> values)]

Description

This numeric extended-format parameter specifies the data rate at which the DCE will accept commands, in addition to 1200 bit/s or 9600 bit/s. It may be used to select operation at rates at which the DCE is not capable of automatically detecting the data rate being used by the DTE. The specified rate takes effect following the issuance of any result code(s) associated with the current command line.

The <rate> specified does not apply in online data state if Direct mode of operation is selected.

Defined values

Parameter	Type	Description
<rate>	integer	9600, 19200, 38400, 57600, 115200 (default value), 230400, 460800, 921600

2.23. Flow Control &K

Syntax

Command	Possible response(s)
AT&K[<value>]	OK

Description

This command defines the DTE/DCE (terminal/modem) flow control mechanism.

Defined values

Parameter	Type	Description
<value>	integer	0: Disables flow control. 3: Enables RTS/CTS flow control. (Default for data modem modes.)

2.24. Command Echo E

Syntax

Command	Possible response(s)
ATE[<value>]	OK

Description

The setting of this parameter determines whether or not the DCE echoes characters received from the DTE during command state and online command state.

Defined values

Parameter	Type	Description
<value>	integer	<p>0: DCE does not echo characters during command state and online command state.</p> <p>1: DCE echoes characters during command state and online command state.</p>

2.25. Controls the setting of eDRX parameters +CEDRXS

Syntax

Command	Possible response(s)
AT+CEDRXS=[<mode>],[<AcT-type>],[<Requested_eDRX_value>]]	+CME ERROR: <err>
AT+CEDRXS?	[+CEDRXS: <AcT-type>,<Requested_eDRX_value> [<CR><LF>+CEDRXS: <AcT-type>,<Requested_eDRX_value> [...]]]
AT+CEDRXS=?	+CEDRXS: (list of supported <mode>s),(list of supported <AcT-type>s),(list of supported <Requested_eDRX_value>s)

Description

The set command controls the setting of the UEs eDRX parameters. The command controls whether the UE wants to apply eDRX or not, as well as the requested eDRX value for each specified type of access technology. The set command also controls the presentation of an unsolicited result code +CEDRXP: <AcT-type>,<Requested_eDRX_value>,<NW-provided_eDRX_value>,<Paging_time_window>]] when <n>=2 and there is a change in the eDRX parameters provided by the network.

Refer subclause 9.2 of 27.007 for possible <err> values.

The read command returns the current settings for each defined value of <AcT-type>.

The test command returns the supported <mode>s and the value ranges for the access technology and the requested eDRX value as compound values.

Defined values

Parameter	Type	Description
<mode>	integer	Indicates to disable or enable the use of eDRX in the UE. 0: Disable the use of eDRX 1: Enable the use of eDRX 2: Enable the use of eDRX and enable the unsolicited result code
<AcT-type>	integer	Indicates the type of access technology. 4: E-UTRAN (WB-S1 mode)
<Requested_eDRX_value>	string	Half a byte in a 4 bit format. The eDRX value refers to bit 4 to 1 of octet 3 of the Extended DRX parameters information element (see subclause 10.5.5.32 of 3GPP TS 24.008 [8]). For the coding and the value range, see Extended DRX parameters information element in 3GPP TS 24.008 [8] Table 10.5.5.32/3GPP TS 24.008. The default value, if available, is manufacturer specific.
<NW-provided_eDRX_value>	string	Half a byte in a 4 bit format. The eDRX value refers to bit 4 to 1 of octet 3 of the Extended DRX parameters information element (see subclause 10.5.5.32 of 3GPP TS 24.008 [8]). For the coding and the value range, see Extended DRX parameters information element in 3GPP TS 24.008 [8] Table 10.5.5.32/3GPP TS 24.008.

<Paging_time _window>	string	Half a byte in a 4 bit format. The paging time window refers to bit 8 to 5 of octet 3 of the Extended DRX parameters information element (see subclause 10.5.5.32 of 3GPP TS 24.008 [8]). For the coding and the value range, see the Extended DRX parameters information element in 3GPP TS 24.008 [8] Table 10.5.5.32/3GPP TS 24.008.
--------------------------	--------	---

2.26. Retrieves eDRX parameters +CEDRXRDP

Syntax

Command	Possible response(s)
AT+CEDRXRDP	+CEDRXRDP: <AcT-type>[,<Requested_eDRX_value>[,<NW-provided_eDRX_value>[,<Paging_time_window>]]]
AT+CEDRXRDP=?	OK

Description

The execution command returns <AcT-type> and <Requested_eDRX_value>, <NW-provided_eDRX_value> and <Paging_time_window> if eDRX is used for the cell that the MS is currently registered to.

If the cell that the MS is currently registered to is not using eDRX, AcT-type=0 is returned.

Defined values

Parameter	Type	Description
<AcT-type>	integer	indicates the type of access technology. This AT-command is used to specify the relationship between the type of access technology and the requested eDRX value. 0: Access technology is not using eDRX 4: E-UTRAN (WB-S1 mode)
<Requested_eDRX_value>	string	Half a byte in a 4 bit format. The eDRX value refers to bit 4 to 1 of octet 3 of the Extended DRX parameters information element (see subclause 10.5.5.32 of 3GPP TS 24.008 [8]). For the coding and the value range, see Extended DRX parameters information element in 3GPP TS 24.008 [8] Table 10.5.5.32/3GPP TS 24.008. The default value, if available, is manufacturer specific.
<NW-provided_eDRX_value>	String	Half a byte in a 4 bit format. The eDRX value refers to bit 4 to 1 of octet 3 of the Extended DRX parameters information element (see subclause 10.5.5.32 of 3GPP TS 24.008 [8]). For the coding and the value range, see Extended DRX parameters information element in 3GPP TS 24.008 [8] Table 10.5.5.32/3GPP TS 24.008.
<Paging_time_window>	string	Half a byte in a 4 bit format. The paging time window refers to bit 8 to 5 of octet 3 of the Extended DRX parameters information element (see subclause 10.5.5.32 of 3GPP TS 24.008 [8]). For the coding and the value range, see the Extended DRX parameters information element in 3GPP TS 24.008 [8] Table 10.5.5.32/3GPP TS 24.008.

2.27. Restricted SIM access +CRSM

Syntax

Command	Possible response(s)
AT+CRSM=<command>[,<fileid>[,<P1>,<P2>,<P3>[,<data>[,<pathid>]]]]	+CRSM: <sw1>,<sw2>[,<response>] +CME ERROR: <err>
AT+CRSM=?	-

Description

By using this command instead of Generic SIM Access +CSIM TE application has easier but more limited access to the SIM database. Set command transmits to the MT the SIM <command> and its required parameters. If a SIM installed in the currently selected card slot, the MT handles internally all SIM MT interface locking and file selection routines. As response to the command, MT sends the actual SIM information parameters and response data. MT error result code +CME ERROR may be returned when the command cannot be passed to the SIM, but failure in the execution of the command in the SIM is reported in <sw1> and <sw2> parameters. Refer 3GPP TS 27.007 subclause 9.2 for possible <err> values.

Defined values

Parameter	Type	Description
<command>	integer	command passed on by the MT to the SIM; refer 3GPP TS 51.011 [28]0: Access technology is not using eDRX 176 : READ BINARY NOTE : The MT internally executes all commands necessary for selecting the desired file, before performing the actual command.
<fileid>	integer	this is the identifier of a elementary datafile on SIM. Mandatory for every command except STATUS 28589 : Administrative data NOTE : The range of valid file identifiers depends on the actual SIM and is defined in 3GPP TS 51.011 [28]. Optional files may not be present at all.
<P1 >	integer	parameters passed on by the MT to the SIM. These parameters are mandatory for every command, except GET RESPONSE and STATUS. The values are described in 3GPP TS 51.011 [28]
<P2>	integer	parameters passed on by the MT to the SIM. These parameters are mandatory for every command, except GET RESPONSE and STATUS. The values are described in 3GPP TS 51.011 [28]
<P3>	integer	parameters passed on by the MT to the SIM. These parameters are mandatory for every command, except GET RESPONSE and STATUS. The values are described in 3GPP TS 51.011 [28]
<data>	-	information which shall be written to the SIM (hexadecimal character format; refer command +CSCS in 3GPP TS 27.007 [9])

<pathid>	string	contains the path of an elementary file on the SIM/UICC in hexadecimal format as defined in ETSI TS 102 221 [60] (e.g. "7F205F70" in SIM and UICC case). The <pathid> shall only be used in the mode "select by path from MF" as defined in ETSI TS 102 221 [60]. NOTE: Since valid elementary file identifiers may not be unique over all valid dedicated file identifiers the <pathid> indicates the targeted UICC/SIM directory path in case of ambiguous file identifiers. For earlier versions of this specification or if <pathid> is omitted, it could be implementation specific which one will be selected.
<sw1>	integer	information from the SIM about the execution of the actual command. These parameters are delivered to the TE in both cases, on successful or failed execution of the command
<sw2>	integer	information from the SIM about the execution of the actual command. These parameters are delivered to the TE in both cases, on successful or failed execution of the command
<response>		successful completion of the command previously issued (hexadecimal character format; refer command +CSCS in 3GPP TS 27.007 [9]). STATUS and GET RESPONSE return data, which gives information about the current elementary datafield. This information includes the type of file and its size (refer 3GPP TS 51.011 [28]). After READ BINARY command the requested data will be returned.

3. Altair proprietary AT commands description

3.1. Display all FW versions %VER

Syntax

Command	Possible response(s)
AT%VER	<ver_info>
AT%VER?	ERROR (OPRATION_NOT_ALLOWED)
AT%VER=?	OK

Description

This command displays the SW/FW version information. Optional SW components may be retrieved using optional <component> parameter. For "ALL" <component> parameter modem will return full version information including optional components, if present.

Defined values

Parameter	Type	Description
<ver_info>	string	version information

Example

```
AT%VER
NP Package: RK_03_02_00_00_21061_001
Apps: RKAPP_03_02_00_00_21061_001__ca6636ba4b93e6d30d094ae50ff67d133468fccc
Using APP processor - no SB or 3B versions
MAC Revision: REL_1250_03_02_00_REV_301546
MAC Package Version: ALT1250_03_02_00_00_21061_FW
MAC Build Time: Mar_11_2022_00_14_36
PHY Revision: 12.50.301536
PHY Build Time: Mar_11_2022_00_02_20
PHY Build Info: releas_0
PMP Revision: 301545
PMP Version: 21061_PMP
PMP build time: Aug_15_2021_15_03_26
DSP Revision: 63960
BB Product: 1250
BB HW Revision: 20
RFIC_6200 Revision: 00
NP Build Time: Aug 19 2022 15:05:05
OK
```

3.2. Get entity status %STATUS

Syntax

Command	Possible response(s)
AT%STATUS=<subsystem>	For all subsystems except of AMBR: %STATUS: <subsystem>: <status> [,<status_info>]
AT%STATUS?	ERROR (OPRATION_NOT_ALLOWED) Operation is not supported
AT%STATUS=?	%STATUS: (list of supported <subsystem>s)

Description

Execution command retrieves current status of specified UE subsystem.

Read command is not supported.

Defined values

Parameter	Type	Description
<subsystem>	string	"INIT", "USIM", "RRC", "UICC", "ATT"
<status>	string	For "INIT" INIT: 0: UE init process ongoing (calibration in progress) INIT: 1: UE init process has finished (calibration complete) For "USIM" USIM: REAL USIM, non-LTE USIM: NO USIM USIM: INACTIVE USIM: USIM is inactive (that is, deactivated), or it is still in the initialization process For "RRC" RRC: IDLE RRC: CONNECTED RRC: UNKNOWN: Used for all other states (init, standby, flight mode, etc.) For "UICC" UICC: 0: SIM is not inserted UICC: 1: SIM inserted, init is in progress UICC: 5: Activation completed. RAM cache also ready except of conditional caches of ISIM files (for IMS) and Phone book.
<status_info>	string	It is an arbitrary status information text, determined by the UE manufacturer and containing additional information about status For "ATT" ATT: 0: detached ATT: 1: normal attach

3.3. Returns measurement for specified measurement type %MEAS

Syntax

Command	Possible response(s)
AT%MEAS=<measurement type>	<p>For RSRP, RSRQ, SINR, RSSI (0-3): %MEAS: <measurement type>:Reported=<measurement value>, Rx0Tx0=<measurement value>,Rx0Tx1=<measurement value>, Rx1Tx0=<measurement value>,Rx1Tx1=<measurement value></p> <p>For TX Power (4): %MEAS: <measurement type>:PUSCH=<measurement value>, PUCCH=<measurement value>, PRACH=<measurement value>, SRS=<measurement value></p> <p>For Signal Quality (8): %MEAS: Signal Quality:RSRP=<measurement value>,RSRQ=<measurement value>, SINR=<measurement value>,RSSI=<measurement value></p> <p>For all NBS RSRP, RSRQ and RSSI: %MEAS: EARFCN=<EARFCN>,CellID=<cell ID>,<measurement type>=<measurement value> [<CR><LF>%MEAS: EARFCN=<EARFCN>,CellID=<cell ID>,<measurement type>=<measurement value>] [...]</p> <p>For all neighboring NBS simultaneous RSRP and RSRQ reporting: %MEAS: EARFCN=<EARFCN>,CellID=<cell ID>,RSRP=<measurement value>, RSRQ=<measurement value> [<CR><LF>%MEAS:EARFCN=<EARFCN>,CellID=<cell ID>,<RSRP>=<measurement value>, RSRQ=<measurement value>] [...]</p> <p>For NBS RSRP in compressed format: %MEAS: NBS RSRP:<EARFCN>,<cell ID>,<measurement value>[, <EARFCN>,<cell ID>,<measurement value>[...]]</p> <p>For E-CID (AT%MEAS="95") in compressed format: %MEAS: ECID:<gcid>,<TimeDifIndex>,<ta>,<MCC>,<MNC>,<TAC>, <EARFCN>,<cell ID>,<SFN>,<RSRP>,<RSRQ> [,<EARFCN>,<cell ID>,<SFN>,<RSRP>,<RSRQ> [...]]</p> <p>The Network Time correspond to SFN of serving cell(AT%MEAS="93")in compressed format: %MEAS: NWTIME:<networkTTI>,<networkUtcTime></p>
AT%MEAS?	<p>ERROR (OPRATION_NOT_ALLOWED) Operation is not supported</p>
AT%MEAS=?	%MEAS: <list of supported measurements>

Description

Command returns measurement for specified measurement type.

The RSRP, RSRQ, SINR and RSSI measurements (0-3) are used mostly for debugging.

For these measurement types the "Reported" measurement value is the averaged narrow-band measurement executed for serving eNB as defined in the spec. In addition, same (0-3) measurement types provide also measurements for antenna ports combinations. These antenna ports do not correspond to the physical antennas, but rather to the logical entities distinguished by their reference signal sequences (see 3GPP TS 36.211 and 36.213). The combination of RX and TX ports is used to reflect Receive-Transmit (RX-TX) path (i.e. Rx0Tx0).

NOTE:

- For RSRP (0) the per RX-TX path measurement value is the result of last non-averaged wide-band measurement used for debugging purposes, when "Reported" value reflects narrow-band.
- The SINR is not reported over the air, its "Reported" value contains combined value of all RX-TX path measurements. Combination is applied as linear averaging of all already averaged RX-TX path SINR measurements converted then to dB.
- Signal Quality measurement type (8) returns last serving cell measurements of RSRP, RSRQ, SINR and RSSI. The AT command response contains only "Reported" values.
- Only single "Reported" value is supported for neighbor eNB measurements.
- If measurement value for some antenna, RX-TX path, RAT or chipset is not supported (not applicable), command returns N/S (without quotes) – not supported indication in the returned string.
- If measurement value is not available at the time of the query (if the UE is not connected, for example), command returns N/A (without quotes) - not available indication in the returned string.
- Read command is not supported.

Defined values

Parameter	Type	Description
<Measurement type>	string	<p>"0": RSRP</p> <p>"1": RSRQ - Not applicable for NB-IoT in RRC CONNECTED mode</p> <p>"2": SINR</p> <p>"3": RSSI - Not applicable for NB-IoT in RRC CONNECTED mode</p> <p>"4": TX Power - Not applicable for NB-IoT in RRC IDLE mode</p> <p>"8": Signal Quality (RSRP & RSRQ & SINR & RSSI) - RSRQ and RSSI not applicable for NB-IoT in RRC CONNECTED mode</p> <p>"10": RSRP reported value only</p> <p>"11": RSRQ reported value only - Not applicable for NB-IoT in RRC CONNECTED mode</p> <p>"12": SINR reported value only</p> <p>"93": Network Time alignment with SFN</p> <p>"95": Measurements for E-CID</p> <p>"96": RSRP for all detected NBS (same as 98) in compressed format: In single line Each eNB measurement data (<EARFCN>, <cell ID>, <measurement value>) is separated by additional space, "97": RSRP and RSRQ for all detected NBS, "98": RSRP for all detected NBS</p> <p>"99": RSRQ for all detected NBS</p> <p>"100": RSSI for all detected NBS</p>
<EARFCN>	integer	Decimal EARFC value
<gcid>	string	The Global cell ID hexadecimal value (See AT%PCONI)
<TimeDiffIndex>	integer	RxTxTimeDiff decimal index (as defined in 9.1.9.2 of 3GPP 36.133) of the measured cell. The value shall be reported by MAC based on RxTxTimeDiff reported by PHY. Be aware that RxTxTimeDiff used by the PHY is different from the value received by MAC CE and has better Ts granularity and accuracy.
<ta>	integer	Currently used Timing Advance value (NTA) of the measured cell. The NTA value is represented by index values of TA = 0, 1, 2, ..., 1282, where an amount of the time alignment is given by NTA = TA x16 per [3GPP 36.213].
<mcc>	integer	A three-digit value indicating the mobile country code as defined in ITU-T Recommendation E.212 Annex A.
<mnc>	integer	A three-digit or two-digit value indicating the mobile network code as defined in ITU-T Recommendation E.212 Annex A.
<TAC>	String	Two byte tracking area code in hexadecimal format
<SFN>	integer	The decimal system frame number (SFN) of the measured cell during which the measurement have been performed. Since there is averaging over multiple SFN, it is advised to supply the latest SFN. If value is not available at the time of the query, command returns N/A (without quotes)
<cell ID>	integer	Decimal Physical Cell ID value

Parameter	Type	Description
<measurement value>	integer	The measurement results are returned in native for each measurement units: dBm for RSRP, RSSI dB for RSRQ, SINR, Pathloss 0.1 dBm for TX Power (for example, 2.5 dBm = 25) Measurement range: -140 <= RSRP <= 0 -60 <= RSRQ <=0 -128 <= SINR <= 40 -26 <= TX Power <= 40
<networkTTI>	integer	The subframe counter of the serving cell corresponds to the network UTC time. The subframe counter is a decimal running from 0 to 10239 (i.e. rollover at 10240) also known as TTI (Transmission Time Interval) counter.
<networkUtcTime>	integer	This field specifies the network UTC time which correspond to the specified TTI counter. The UTC time is a decimal counter of 1msec units counted since 00:00:00 on 1 January, 1900

Example

AT%MEAS="0"

%MEAS: RSRP: Reported = -91, Rx0Tx0 = -106, Rx0Tx1 = -88, Rx0Tx2 = -140, Rx0Tx3 = -140, Rx1Tx0 = -140, Rx1Tx1 = -140, Rx1Tx2 = -140, Rx1Tx3 = -140

OK

AT%MEAS="8"

%MEAS: Signal Quality: RSRP = -93, RSRQ = -9, SINR = 11, RSSI = -71

OK

AT%MEAS="97"

%MEAS: EARFCN=276, CellID=394, RSRP=-95, RSRQ=-7

OK

3.4. LTE protocol param's query override and toggle at run-time %LTECMD

Syntax

Command	Possible response(s)
AT%LTECMD=<cmd>,<lte_object> [,<param1>...]	For <cmd>=2 (query) %LTECMD: <lte_object>[,<param1>...]
AT%LTECMD?	ERROR (not supported)
AT%LTECMD=?	%LTECMD: (list of supported <cmd>s), (list of supported <lte_object>s)

Description

This command is used for LTE protocol parameters query and override at run-time.

The command is compound, which means that <param#> parameters are <lte_object> specific.

The query command (2) is supported for all declared <lte_object>s. It may return ERROR for Network provided parameters in LTE disconnected state.

The override command (1) may be unsupported for some LTE protocol <lte_object>s especially for those defined by Network or negotiated with Network. In such a case the override command (1) returns ERROR. Missed override support is declared on per-object base.

Some LTE parameters provided by eNB may be optional. A parameter, which is not specified, will be omitted and written as "," in query (2) AT command response.

Note:

- If overridden parameter is part of capability negotiation with Network, it will be applied after next re-attach only.
- All settings are applied only during run-time (not NV stored) and will be lost after reboot.

Read command is not supported.

Defined values

Parameter	Type	Description
<cmd>	integer	1: override/toggle current LTE parameter value or negotiate with network new LTE capability/parameter 2: query current LTE parameter value in use

Parameter	Type	Description
<lte_object>	string	"INACTTMR": Inactivity Timer for RRC state mismatch recovery
<param1>	integer	timeout in sec 0: disable inactivity timer. Default value is 0. 1 and more: enable inactivity timer for <param1> seconds. Modem restarts inactivity timer on every UL/DL activity in RLC. Once the timer has been expired, modem will initiate RRC connection re-establishment procedure.

Parameter	Type	Description
<lte_object>	string	"PTW": LTE-specific paging transmission window (eDRX parameter missed in AT+CEDRXRDP)
<param1>	integer	0: 1.28 seconds 1: 2.56 seconds 2: 3.84 seconds 3: 5.12 seconds 4: 6.4 seconds 5: 7.68 seconds 6: 8.96 seconds 7: 10.24 seconds 8: 11.52 seconds 9: 12.8 seconds 10: 14.08 seconds 11: 15.36 seconds 12: 16.64 seconds 13: 17.92 seconds 14: 19.20 seconds 15: 20.48 seconds

3.5. Command to Instruct eCM to attach or detach the LTE network %CMATT

Syntax

Command	Possible response(s)
AT%CMATT=<param>	OK/ERROR
AT%CMATT?	%CMATT: <param>
AT%CMATT=?	%CMATT: (list of supported <param>)

Description

AT command sent from external Host, which instructs LTE module (eCM application) attach or detach the LTE network.

Defined values

Parameter	Type	Description
<param>	integer	instructs the device to detach or attach the LTE network. 0 : detach 1 : attach

3.6. Command to start/stop any PDN connection %PDNACT

Syntax

Command	Possible response(s)
AT%PDNACT=<act>,[<sessionID>],[<apnname>]	OK/ERROR
AT%PDNACT?	Returns all active sessions: %PDNACT:<sessionID>,<stat>,<APN>,<cid>] [<CR><LF>%PDNACT:<sessionID>,<stat>,<APN>,<cid>] [...]]
AT%PDNACT=?	OK

Description

This command is used by external Host to instruct eCM to expose and connect (disconnect) specific PDN to the Host.

There may be more than one PDN exposed to Host.

Session ID is Altair proprietary session identifier, which is defined for each session established over-the-air in NP config file named '/etc/config/ecm'.

User can use <apnname> or <sessionID> or both to identify PDN. If both are defined, PDN is identified by <apnname>.

The PDNs terminated in modem cannot be exposed to Host and any attempt to activate them from host will return ERROR. PDN sharing between Host and modem is not supported yet.

Defined values

Parameter	Type	Description
<act>	integer	indicates the required action 0: detach 1: attach
<sessionID>	integer	numeric value of session identifier defined in NP config file
<apnname>	string	indicates the APN name configured for PDN
<stat>	integer	indicates the actual PDN state 0: non-active 1: active

3.7. Set run-time PDN parameters %PDNSET

Syntax

Command	Possible response(s)
AT%PDNSET=<ext_sessionID>,<apnname>,<ip_type>,<ppp_auth>,<user>,<passw>,<host_name>,<IPv4AddrAlloc>,<pcscf_discovery>,<NSLPI>	OK/ ERROR
AT%PDNSET?	[%PDNSET:<ext_essionID>,<apnname>,<ip_type>,<ppp_auth>,<user>,<passw>,<host_name>,<IPv4AddrAlloc>,<pcscf_discovery>,<NSLPI> [<CR><LF>%PDNSET:<ext_sessionID>,<apnname>,<ip_type>,<ppp_auth>,<user>,<passw>,<host_name>,<IPv4AddrAlloc>,<pcscf_discovery>,<NSLPI> OK
AT%PDNSET=?	OK

Description

The command is intended to set run-time PDN parameters for data PDNs exposed to host.

In addition, the APN name and IP type provided in the command will override default PDN settings from embedded APN table stored into UE NV. The PPP security parameters are run-time only and are not stored into non-volatile memory.

The command will be effective immediately, which means that if parameters are different from those already in use, the PDN will be deactivated, updated locally and on server (via LTE messages) and then reactivated.

Missed PPP security parameters remove previous PPP security setting completely.

Command is intended to substitute previous %PPPAUTH command, which is not synced with other PDN parameters definition.

NOTE:

- In both command and response, a parameter which is not specified will be written as ",,"
- Last parameters of the command which are not specified may not include the ",," notation. e.g.
AT%PDNSET=<ext_sessionID>,<apnname>,<ip_type>

Defined values

Parameter	Type	Description
<ext_sessionID>	integer	value of the session identifier which is configured and used by external application or host and defined in NP config file
<apnname>	string	indicates the APN name configured for PDN.
<ip_type>	string	"IP", "IPv6", "IPv4v6"
<ppp_auth>	string	PPP authentication type: "NONE", "PAP", "CHAP"
<user>	string	username used for authentication.
<passw>	string	password used for authentication.
<host_name>	string	Optional, the name of the Authentication server.

Parameter	Type	Description
<pcscf_discove>	integer	0: disable 1: enable
<IPv4AddrAlloc>	integer	controls how the host requests to get the IPv4 address information (same as defined in AT+CGDCONT) 0: IPv4 address allocation through NAS signaling 1: IPv4 address allocated through DHCP
<NSLPI>	integer	indicates the NAS signalling priority requested for this PDP context as defined in AT+CGDCONT in 3GPP 27.007

3.8. AT command to enable socket service %SOCKETCMD

Syntax

Command	Possible response(s)
AT%SOCKETCMD=<cmd>[,<param1>[,<param2>[,<param3>...]]]	<p>For "INFO" command: [%SOCKETCMD:<socket_stat>,<socket_type>,<src_ip>,<dst_ip>,<src_port>,<dst_port>[,<socket_dir>,<socket_to>]] OK</p> <p>For "SSLINFO" command: [%SOCKETCMD:<SSL_mode>,<ClientCerId>] OK</p> <p>For "ALLOCATE" command: %SOCKETCMD:<socket_id> OK</p> <p>For other commands: OK/ERROR</p>
AT%SOCKETCMD?	Returns the list of created sockets and their status: [%SOCKETCMD:<socket_id>,<socket_stat>[<CR><LF> %SOCKETCMD:<socket_id>,<socket_stat> [...]]] OK
AT%SOCKETCMD=?	%SOCKETCMD: (list of supported <cmd>s)

Description

AT command to create and maintain socket by the device.

IP address formatting for using in this command:

- IPv4 format shall use the format (xxx.xxx.xxx.xxx). Where xxx is a decimal number from 0-255 and when the leading digits in each segment are 0, the number of digits is adjusted accordingly and output. Example: 192.0.2.1, 127.0.0.1 etc ...
- IPv6 format (xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx) where x is in hexadecimal notation.
Example: 2001:0db8:bd05:01d2:288a:1fc0:0001:10ee

When socket is opened (using "OPEN" or "LISTEN" command) the unsolicited %SOCKETEV is automatically enabled (see AT%SOCKETEV for details).

There are 2 types of listener socket: "synchronous" and "asynchronous":

- Synchronous: The connection had been established once "OK" is responded. The maximum waiting time for the connection establishment is deterministic.
- Asynchronous: The connection is not yet established even "OK" is responded. User must wait for URC, which can be happened at any time (or never).

Asynchronous listening socket is also called Parent Listening socket below. Parent listening socket and spawned from it connected sockets will have different IDs.

After activating of parent listening socket, %SOCKETEV=4 unsolicited response will be used to notify "accept incoming connection". This URC provides both listening and spawned from it connected sockets IDs.

Parent listening socket cannot be used for fast send operation. The ERROR will be returned on "FASTSEND" call for such socket.

If connected socket has been spawned from parent listening socket, the connected socket deactivation will close this connected socket completely.

Important notes

AT%SOCKETCMD command is blocking. This may cause blocking of the AT channel for long time in case of "OPEN" and "LISTEN" command.

The "DEACTIVATE"/"DELETE" commands are non-blocking by default. They could be configured to wait for operation completion using additional parameter. If configured, sub-command become to be also blocking and can take time (The socket implementation may take about 30 sec to close the connection due to internal TCP FIN timer)

The "DEACTIVATE"/"DELETE" commands may be ordered while data is still retained inside the module. In such cases, the module activates the "close" process only after it has sent the internally-retained data to its destination. However, the module may still drop the internally-retained data in case of connection loss and in case of PDN closure.

Local IP address cannot be configured by the AT%SOCKETCMD command (It is assigned by the network)

Local IP port can be configured by the AT%SOCKETCMD command or can be set automatically by the socket.

Number of supported sockets is operators/OEM specific configured with AT%SETACFG. It can be ranged from 1 socket to several ones.

Important notes related to SSL:

The network allocated SSL session ID is kept and maintained internally by the device per connection allocated "Session ID". The SSL session ID is kept even when the TCP connection is closed to allow reuse of the SSL session on new opened TCP connection.

Upon "ACTIVATE" command, if SSL session ID is allocated by the network, then device will try first to recover the existing SSL session ID. If failed to recover SSL connection, then will open new one.

"SSLALLOC" command will delete previously allocated SSL session-id.

Defined values

Parameter	Type	Description
<cmd>	string	"ALLOCATE": Allocate socket session with the following parameters
<param1>	integer	The "Session ID" a numerical numeric value defined in NP configuration file which point to the PDN on which the socket should be opened. "Session ID" is defined in AT%CGINFO
<param2>	string	"TCP": for creation of TCP socket (TLS mode when security is enabled) "UDP": for creation of UDP socket (DTLS mode when security is enabled)
<param3>	string	"OPEN": The socket open TCP/UDP connection with the peer "LISTEN": The socket create TCP/UDP listener "LISTENP": The socket create TCP parent listener socket. Once activated, multiple connected sockets could be spawned from it.
<param4>	string	Destination IPv4 or IPv6 address
<param5>	integer	1 - 65535: Destination UDP/TCP port number.

Parameter	Type	Description
<param6>	string	0 - 65535 : Source (local) UDP/TCP port number. 0 : auto port selection by the socket and it's also used as the default value
<param7>	integer	Packet size to be used by the TCP/UDP/IP stack for data sending 0 : Automatically selects default value (MTU based) 1 – 1500 : Packet size in bytes
<param8>	integer	TCP Connection setup timeout. If timer expires, then command return ERROR. Parameter range is 30–360sec (Default is 60 sec). Parameter is irrelevant for parent listening socket; it will be ignored if present. - In case that connection type is "OPEN" the timeout event is: No SYN-ACK reply from the peer. - In case that connection type is "LISTEN" the timeout event is: No SYN request from the peer.

Parameter	Type	Description
<cmd>	string	"SSLALLOC" : Add SSL for specific socket session id with the following SSL parameters.
<param1>	integer	The previously allocated socket id
<param2>	integer	SSL mode. See definition in <SSL_mode>
<param3>	integer	Client certificate ID. See definition in <ClientCerId>

Parameter	Type	Description
<cmd>	string	"ACTIVATE" : Activates the predefined socket
<param1>	integer	The socket ID (identifier) of the specified socket.

Parameter	Type	Description
<cmd>	string	"INFO" : Returns the details of the specific socket ID.
<param1>	integer	The socket ID (identifier) for which info is requested.

Parameter	Type	Description
<cmd>	string	"SSLINFO" : return the SSL details of specific socket ID
<param1>	integer	The socket ID (identifier) for which info is requested

Parameter	Type	Description
<cmd>	string	"DEACTIVATE" : Request to deactivate the specific socket ID and release its resources.
<param1>	integer	The socket ID (identifier) to be closed.
<param2>	integer	optional parameter. Optional flag to indicate wait or not for socket deactivation completion: 0 : no need to wait (default) 1 : wait

Parameter	Type	Description
<cmd>	string	"DELETE" : Request to delete specific socket ID allocation
<param1>	integer	The socket ID (identifier) to be closed.
<param2>	integer	optional parameter. Optional flag to indicate wait or not for socket deletion completion: 0 : no need to wait (default) 1 : wait

Parameter	Type	Description
<cmd>	string	"SETOPT" : Set Socket options for specific socket ID
<param1>	integer	The socket ID (identifier) for which the option is set
<param2>	integer	TCP/UDP aggregation timer in msec (1-36000, default: 5000). This timer allows improved data transmission efficiency by aggregating several transmissions to single packet.

Parameter	Type	Description
<socket_id>	integer	The socket ID (identifier) of the specified socket.
<socket_stat>	string	"DEACTIVATED" : The socket is not active. "ACTIVATED" : The socket is active. "LISTENING" : The socket is listening
<socket_type >	string	"TCP" : For creation of the TCP socket "UDP" : For creation of the UDP socket
<src_ip>	string	Source IPv4 or IPv6 address
<dst_ip>	string	Destination IPv4 or IPv6 address
<src_port>	string	1 – 65535 : Source UDP/TCP port number.
<dst_port>	string	1 – 65535 : Destination UDP/TCP port number.
<socket_dir>	integer	the direction of the TCP socket 0 : no set 1 : dialer 2 : listener
<socket_to>	integer	TCP connection setup timeout as specified in the "OPEN" command
<socket_err>	integer	Error values as defined by 3GPP TS 27.007 subclause 9.2 for <err> values with extension
<SSL_mode>	integer	0 : mutual authentication (default) 1 : authenticate client side only 2 : authenticate server side only
<ClientCerId>	integer	Certificate profile ID pre-settled by AT%CERTCFG. Default zero profile ID may be used for server authentication only and will apply root CAs stored into Root Trusted folder for authentication. For other chipsets: Client certificate ID (default is: 0). The ID of client certificate which should be sent by the client to the server to authenticate the client. The referenced certificate must be provisioned on the device file system and identified with ID
<wlength>	integer	The actual length in Bytes of data written to the socket in the "FASTSEND" command.

3.9. DATA delivery for Socket service %SOCKETDATA

Syntax

Command	Possible response(s)
AT%SOCKETDATA=<cmd>[,<param1>[,<param2>[,<param3>...]]]	For "RECEIVE" command: [%SOCKETDATA:<socket_id>[,<rlength>,<moreData>[,<rdata>[,<src_ip>,<src_port>]]]] OK/ERROR For "SEND" command: [%SOCKETDATA:<socket_id>[,<wlength>]] OK/ERROR
AT%SOCKETDATA?	ERROR (not supported)
AT%SOCKETDATA=?	%SOCKETDATA: (list of supported <cmd>s)

Description

This command is used to send/receive to/from the socket.

NOTE:

When operation returns with ERROR this can be evidence that the TCP socket was closed (by user or by socket idle timer or by peer). There is unsolicited indication for socket closure by idle timer or by peer. Also note that "SEND" command return "OK" after the actual transmission of the data, but before "ACK" reception from the peer. This can result with TX buffer fill-up and therefore further "SEND" command may result with ERROR.

The application can issue AT%SOCKET="LASTERROR" to get the reason for the last failure.

Defined values

Parameter	Type	Description
<cmd>	string	"SEND": Write to the socket
<param1>	integer	The socket ID (identifier) of the socket.
<param2>	integer	1 - 1500: The length in Bytes of the data which needs to be written.
<param3>	string	The data, in HEX format (in quotes), which will be written to the specified socket.

Parameter	Type	Description
<cmd>	string	"RECEIVE": Read from the socket
<param1>	integer	The socket ID (identifier) of the socket.
<param2>	integer	1 - 1500: The maximal length of the data buffer to be read from the socket.

Parameter	Type	Description
<socket_id>	integer	The socket ID (identifier) of the specified socket.
<rlength>	integer	The actual length in Bytes of the data which was actually read.
<moreData>	integer	The length on bytes of the data left in the RX buffer
<rdata>	string	The read data in HEX format (in quotes).
<wlength>	integer	The actual length in Bytes of the data written to the socket.

Parameter	Type	Description
<src_ip>	string	optional parameter, returned for UDP datagrams only Source IPv4 or IPv6 address
<src_port>	integer	optional parameter, returned for UDP datagrams only Source UDP/TCP port number in the range 1-65535

3.10. Notify about socket events %SOCKETEV

Syntax

Command	Possible response(s)
AT%SOCKETEV=<event_id>,<mode>	OK/ERROR
AT%SOCKETEV?	ERROR (not supported)
AT%SOCKETEV=?	%SOCKETEV: (list of supported <event_id>s), (list of supported <mode>s)
(unsolicited)	%SOCKETEV:<event_id>,<socket_id> [,<connected_socket_id>]

Description

The command is intended to notify about socket events. The reporting may be enabled/disabled per event type.

When socket is opened (using "OPEN" or "LISTEN" sub-commands of AT%SOCKETCMD) the

unsolicited %SOCKETEV is automatically enabled for all event types.

The unsolicited is sent in 3 cases:

- Rx buffer has more Bytes to read.
- Socket terminated by peer.
- New connected socket is accepted/spawned from listening socket.

There are 2 types of listener socket: "synchronous" and "asynchronous". For asynchronous socket user must wait for URC, which can be happened at any time (or never).

Asynchronous listening socket is also called Parent Listening socket below. Parent listening socket and spawned from it connected sockets will have different IDs.

After activating of parent listening socket, %SOCKETEV=4 unsolicited response will be used to notify "accept incoming connection". This URC provides both listening and spawned from it connected sockets IDs.

Defined values

Parameter	Type	Description
<event_id>	integer	0: All events, used only in execution command 1: Rx buffer has more Bytes to read 3: Socket terminated by peer 4: New connected socket is accepted/spawned from parent listening socket
<mode>	integer	unsolicited result response presentation 0: Disabled 1: Enabled
<socket_id>	integer	the socket ID (identifier) of the socket (parent for async)
<connected_socket_id>	integer	the socket ID (identifier) of the connected socket spawned from the specified parent listening socket

3.11. read/write/delete/list user certificates %CERTCMD

Syntax

Command	Possible response(s)
AT%CERTCMD=<cmd>[,<filename>[,<type>,<CR><LF><data>]]	For <cmd>="READ": [%CERTCMD: <data>] For <cmd>="DIR": [%CERTCMD:<filename>[,<filename>...]]
AT%CERTCMD?	ERROR (not supported)
AT%CERTCMD=?	%CERTCMD: (list of supported <cmd>s), (list of supported <type>s)

Description

Execution command is used to read/write/delete/list user certificates to/from NV.

The PEM pseudo-text format specifics is that this format contains newlines (<LF>) in the <data> body. This causes some AT command processing troubles even if the <data> string context is enclosed in quotes. To overcome these troubles, the AT%CERTCMD="WRITE" command shall contain <CR><LF> additional newline separator just before PEM data enclosed in quotes.

Defined values

Parameter	Type	Description
<cmd>	string	file operation on the NV storage: "READ" : read the certificates pointed by <filename>. [Private key cannot be read, command returns ERROR.] "WRITE" : write the credentials with its <filename> to the NV storage "DELETE" : delete the credential pointed by the <filename> from the NV storage "DIR" : get the list of credential file names pointed by <filename>.
<filename>	string	the name of the file to be transferred, deleted or listed. Use "~" for this parameter to retrieve trusted root certificates folder content. If omitted, the list of files from user root certificate folder (written by AT%CERTCMD="WRITE") is shown.
<type>	integer	0 : certificate 1 : private key
<data>	string	certificate/private key in PEM format. Usage of quotes is mandatory. The data content in PEM format is transferred in pseudo-text format with <LF> (0x10) service symbols inside and will be shown with newlines.

Example

1. Upload CA certificate named AmazonRootCA3ECC256.pem

```
AT%CERTCMD="WRITE","AmazonRootCA3ECC256.pem",0,"-----BEGIN CERTIFICATE-----
```

...

```
-----END CERTIFICATE-----"
```

OK

2. Upload client private key named 97fbc28291-private.pem.key while encrypting the key

```
AT%CERTCMD="WRITE","97fbc28291-private.pem.key",1,"-----BEGIN RSA PRIVATE KEY-----
```

...

```
-----END RSA PRIVATE KEY-----"
```

OK

3. Read Client Certificate named b7c1bd8c7c-certificate.pem.crt

```
AT%CERTCMD="READ","b7c1bd8c7c-certificate.pem.crt"
```

```
%CERTCFG: "-----BEGIN CERTIFICATE-----
```

...

```
-----END CERTIFICATE-----"
```

OK

4. Get the list of credential folder files:

```
AT%CERTCMD="DIR"
```

```
%CERTCFG: "AmazonRootCA3ECC256.pem","b7c1bd8c7c-private.pem.key", "b7c1bd8c7c-certificate.pem.crt"
```

OK

3.12. add/delete certificate (TLS) profiles %CERTCFG

Syntax

Command	Possible response(s)
AT%CERTCFG=<op>,<profile_id>[,<ca_file>][,<ca_path>][,<dev_cert>,<dev_key>]]	
AT%CERTCFG?	[%CERTCFG: <profile_id>[,<profile_id>...]] OK
AT%CERTCFG=?	%CERTCFG: (list of supported <op>s)

Description

Execution command is used to add/delete certificate (TLS) profiles into TLS certificate profiles config file.

Device contains 2 certificate storage locations:

- Root Trusted folder, which contains only root CAs
- User Trusted folder, which contains root CAs and device credentials (certificate and private key) installed by user or provisioned over the air.

The parameters encoded in AT commands and composed then into single TLS profile stored into configuration file.

This config file content will be composed from per-profile sections like:

```
"profile_id": {
    'cafile': "ca_file",
    'capath': "ca_path",
    'cert': "dev_cert",
    'key': "dev_key",
}
```

Where <profile_id>, <ca_file>, <ca_path>, <dev_cert> and <dev_key> are taken from the input parameter list.

Any <ca_file>, <ca_path>, <dev_cert> and <dev_key> are optional and may be omitted.

The <dev_cert> and <dev_key> shall be always added together or omitted together too.

If some parameters are omitted, they will be also omitted in config file.

When per-profile section is created by this AT, TLS security layer using this profile For will apply next rules:

- If root CA file name is known and <ca_file> parameter is set, then try to find <ca_file> in both storage locations in next order:
 - Root Trusted folder
 - User Trusted folder
- If <ca_file> is defined, but not found or if root CA file name is unknown and <ca_file> parameter is omitted, apply <ca_path> parameter, if present:
 - If <ca_path> = "~", then use Root Trusted folder to verify server certificate
 - If <ca_path> = ".", then use User Trusted folder to verify server certificate
- Always use User Trusted folder to find device <dev_cert> and <dev_key> pair

This is the AT responsibility, which is going to use TLS profile (i.e. AT%SOCKETCMD, AT%ATSIOTCMD, etc.) to verify if the profile is properly defined and contain all needed credential for mutual, server or device authentication.

The Default profile ID=0 cannot be defined by this AT and does not present in TLS config file.

It may be used by TLS-consumer ATs (such as AT%SOCKETCMD, AT%ATSIOTCMD, etc.). This default profile implies only server authentication using root CA stored into Root Trusted folder.

Read command returns the list of Profile IDs already in use. If there is not any profile ID defined yet, read command returns only OK.

Defined values

Parameter	Type	Description
<op>	string	operation to be applied to TLS profile in config file. Add operation applied to existed profile will return ERROR. Explicit profile deletion is expected: "ADD" : add new profile "DELETE" : delete profile
<profile_id>	integer	1-10 : numeric value to identify set of credentials used together for some TLS connection(s). The profile_id=0 is prohibited and reserved for root trusted certs already stored into default root trusted folder
<ca_file>	string	the name of the root certificate file, if it is known.
<ca_path>	string	the path of the user-added or trusted root certificates. Use "~" (home directory) to create 'ca_path' config file parameter for default root trusted folder. Use "." to create 'ca_path' config file parameter for user root certificate folder (which content is populated by AT%CERTCMD="WRITE").
<dev_cert>	string	the name of the user-added device cert file.
<dev_key>	string	the name of the user-added device private key file.

Example

1. Create new config file section:

```
AT%CERTCFG="ADD",1,"AmazonRootCA3ECC256.pem",,"b7c1bd8c7c-certificate.pem.crt",,"b7c1bd8c7c-private.pem.key"
```

OK

3.13. modifies the uBoot delay %SETBDELAY

Syntax

Command	Possible response(s)
AT%SETBDELAY=<tout>	OK or ERROR
AT%SETBDELAY?	%SETBDELAY: <tout>
AT%SETBDELAY=?	OK

Description

It modifies the uBoot delay applied in next cold boot. Once modified, new timeout value will be used as new default timeout in all following cold boots.

Read command is not supported.

Defined values

Parameter	Type	Description
<tout>	string	1 - 99 : delay timeout value in sec

3.14. Convert domain name to IP address %DNSRSLV

Syntax

Command	Possible response(s)
AT%DNSRSLV=<SessionID>,<domain_name>	%DNSRSLV:<ip_type>,<ip_addr> [%DNSRSLV: <ip_type>,<ip_addr>[...]] OK
AT%DNSRSLV?	ERROR (not supported)
AT%DNSRSLV=?	OK

Description

A request from the device to resolve specific domain name. The IP address formatting for using in this command is as described in AT%SOCKETCMD command.

Defined values

Parameter	Type	Description
<SessionID>	integer	A numerical numeric value defined in NP configuration file which point to the PDN on which the IP address should be resolved. "Session ID" is defined in AT%PDNACT
<domain_name>	string	Domain name to resolve
<ip_type>	integer	0: IPv4 1: IPv6
<ip_addr>	string	IPv4 or IPv6 resolved address

3.15. Read the %CCID

Syntax

Command	Possible response(s)
AT%CCID	%CCID: <iccid> OK or ERROR
AT%CCID?	ERROR (not supported)
AT%CCID=?	OK

Description

Execution command reads the ICCID (card identification number) from SIM EFICCID. It is a unique identification number for the SIM.

If SIM is not inserted, the ERROR is returned by execution command.

Defined values

Parameter	Type	Description
<iccid>	string	19 or 20 decimal digits, which reflects SIM ICCID value. The format of the ICCID is: MMCC IINN NNNN NNNN NN C x MM : Constant (ISO 7812 Major Industry Identifier) CC : Country Code II : Issuer Identifier N{12} : Account ID ("SIM number") C : Checksum calculated from the other 19 digits using the Luhn algorithm. x : An extra 20th digit, which may be returned by SIM, but it is not officially part of the ICCID.

Example

AT%CCID

%CCID: "01234567890123456789"

OK

3.16. Set configuration %SETACFG

Syntax

Command	Possible response(s)
AT%SETACFG=<param_file_name>.<param_section>.<param_name>.<param_value>	OK/ERROR

Description

Set a configuration field to Module.

Defined values

Parameter	Type	Description
< param_file_name >	string	"LWM2M"
< param_section >	string	"Config"
<param_name>	string	"Version"
<param_value>	string	"1.0" "1.1"

3.17. Get configuration %GETACFG

Syntax

Command	Possible response(s)
AT%GETACFG=<param_file_name>,<param_section>,<param_name>	%GETACFG: <param_value> OK/ERROR

Description

Get a configuration field from Module

Defined values

Parameter	Type	Description
< param_file_name >	string	"LWM2M"
< param_section >	string	"Config"
<param_name>	string	"Version"
<param_value>	string	"1.0" "1.1"

3.18. Execute PING service %PINGCMD

Syntax

Command	Possible response(s)
AT%%PINGCMD: <ip_type>,<dst_ip>[,<count>[,<pktsize>[,<timeout>]]]	%GETACFG: <param_value> OK/ERROR

Description

This command is used for executing PING service. The IP address formatting for using in this command is as described in the AT%SOCKETCMD command.

Execution command returns OK only (without AT response body prefixed by %PINGCMD) in the case that ping requests has been sent, but there is no ECHO replies received. Execution command returns ERROR if there is something wrong in AT command format or parameters, which prevents ping requests issuing.

Defined values

Parameter	Type	Description
<ip_type>	integer	0: IPv4 1: IPv6
<dst_ip>	string	follow the RFC IP type default of the IPv4 and IPv6.
<count>	integer	1 - 20 (default value is 1)
<pktsize>	integer	default value is 56. for IPv4 1 - 9936 for IPv6 1 - 9908
<timeout>	integer	1 – 60 sec (default value is 6 sec)